

# PD6100 ProVu Strain Gauge, Load Cell, and mV Meter

## Data Sheet



**PROVu**  
SERIES

**SUPER-BRIGHT LEDs**  
Our Brightest Display Ever

**MeterView Pro**  
USB Install



- 1/8 DIN Digital Panel Meter with UL Type / NEMA 4X, IP65 Front
- 15 mV, 30 mV, 150 mV, 300 mV unipolar;  $\pm 15$  mV,  $\pm 25$  mV,  $\pm 150$  mV,  $\pm 250$  mV bipolar Inputs
- Selectable 5 or 10 VDC Sensor Excitation @ 350 mA Max
- Dual-Line 6-Digit Display, 0.6" (15 mm) & 0.46" (12 mm)
- 2 or 4 Relays with Interlocking Capability + Isolated 4-20 mA Output Options
- Free PC-Based, On-Board, MeterView Pro USB Programming Software
- No Assembly Required
- Optional SunBright Display Models for Outdoor Applications
- Operating Temperature Range:  $-40$  to  $65^{\circ}\text{C}$  ( $-40$  to  $149^{\circ}\text{F}$ )
- UL & C-UL Listed. E160849; 508 Industrial Control Equipment
- Input Power Options: 85-265 VAC / 90-265 VDC or 12-24 VDC / 12-24 VAC
- Supports up to Twelve (12)  $350\ \Omega$  Load Cells
- Capture or Programmable Tare Feature
- Auto-Zero Feature Eliminates Zero Drift
- Ratiometric Operation
- Programmable Display, Function Keys & Digital Input
- External 4-Relay & Digital I/O Expansion Modules
- RS-232 & RS-485 Serial Communication Options with Modbus RTU
- Password Protection
- Wide Assortment of UL Type / NEMA 4X Enclosures for up to Ten Meters
- Light/Horn & Button Accessory
- Control Station Accessory For Remote Operation of ProVu
- Stainless Steel Sun Hood Accessory Available
- 3-Year Warranty



ProVu meter mounted in PDA2301 enclosure with PDA18DINSH Sun Hood and MOD-LH Light/Horn accessory. See page 16 for details.

## TABLE OF CONTENTS

- OVERVIEW . . . . . 3
- ISOLATED POWER SUPPLIES . . . . . 4
- ADVANCED DISPLAY FEATURES . . . . . 5
- QUICK & EASY SCALE & PROGRAMMING METHODS . . . . . 7
- 4-20 MA OUTPUT & RELAYS. . . . . 10
- SIGNAL INPUT CONDITIONING . . . . . 13
- LOAD CELL SUMMING APPLICATION . . . . . 13
- DIGITAL COMMUNICATIONS. . . . . 14
- FIELD EXPANSION MODULES . . . . . 14
- PHYSICAL FEATURES . . . . . 15
- VIDEOS TO WATCH . . . . . 16
- OPERATIONAL FEATURES . . . . . 16
- UL TYPE / NEMA 4 & 4X FIELD ENCLOSURES . . . . . 20
- LIGHT/HORN & BUTTON MOUNTED TO ENCLOSURE . . . . . 21
- DIMENSIONS . . . . . 25
- CONNECTIONS . . . . . 25
- SPECIFICATIONS . . . . . 26
- ORDERING INFORMATION . . . . . 30

## OVERVIEW

**Front**

UV Resistant Sunlight Readable Models

UL Type / NEMA 4X Front Panel

MeterView Pro USB Install

Large 0.6" Digits

Rugged Front

Dual-Line 6-Character Display

Standard or Custom Engineering Units

Manual Control Mode

Gross Value Displayed

PV, Max (Peak), Min (Valley)

Tare Mode

Programmable Function Keys

Alarm Status Indicators

**Connections**

4-20 mA Output Powered by ProVu

RELAY4 RELAY3 RELAY2 RELAY1

NO NC C NO NC C NO NC C NO NC C

MA OUT

I- I+ R

F4 COM EX+ SG- SG+ EX-

1 2 3 4 5 6 7 8

SIGNAL CONFIG M-LINK POWER

Connections for PD6100-6H7 & PD6100-7H7

- Form C (SPDT) relays
- Removable terminal blocks
- 4 relays + isolated 4-20 mA output option
- Universal 85-265 VAC or 12/24 VDC input power
- 15 mV, 30 mV, 150 mV, 300 mV unipolar;  $\pm 15$  mV,  $\pm 25$  mV,  $\pm 150$  mV,  $\pm 250$  mV bipolar Inputs
- Digital input (F4)

## The Only Strain Gauge and Load Cell Meter You Will Ever Need

Front, back and in between, the PD6100 boasts specifications, features and functionality that make it the only strain gauge and load cell meter you will ever need. The number one feature that makes the ProVu such a useful device is its built-in isolated 5 or 10 VDC sensor power supply that can be used to power the input sensor or 24 VDC for other devices. An additional isolated 24 VDC power supply is included with the 4-20 mA output option, shown in the above diagram.

The picture above illustrates several other reasons why the ProVu is the only strain gauge and load cell meter you will ever need. First off, is the UL Type / NEMA 4X rated front panel which means you can install the ProVu in panels exposed to moisture, dust and other adverse conditions. The picture also points out that the ProVu is available with an optional Sunbright display which means you can install and read the ProVu in direct sunlight.

The next thing to notice is the 6-digit dual-line display. The main display can be programmed to indicate PV, maximum (peak), minimum (valley), alternating max/min, one of four alarm set points, or Modbus input. The secondary display can be configured to display engineering units, set points, user defined legends, or simply turned off.


The four relays can be used for alarm indication or process control such as pump alternation control. The 4-20 mA isolated output, Modbus RTU serial communications, and digital I/O options make the PD6100 an excellent addition to any system. Finally all these features and capabilities can easily be programmed with free MeterView Pro PC-based software.

## ISOLATED POWER SUPPLIES

### Meter Powers Sensor

A powerful isolated power supply is a standard feature on the PD6100 meter. It can be configured for 5, 10 (default), or 24 V (not to be used with strain gauge or load cell) by means of a simple internal jumper (see manual). An additional power supply (24 V @ 40 mA) is standard with the 4-20 mA output option.

The following diagram illustrates how to wire the ProVu so it will power the sensor:

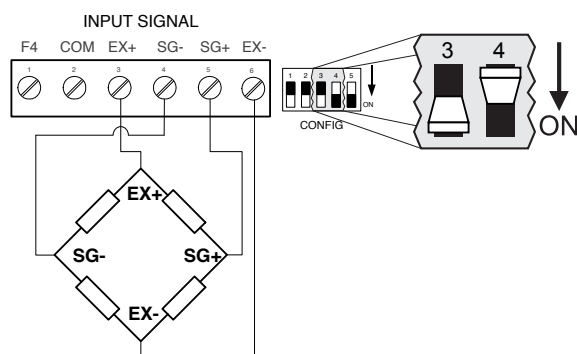

### PDA1024-01 24 VDC Sensor Power Supply

Precision Digital offers the PDA1024-01 for applications that require more than the 200 mA power that the ProVu can provide.




#### Specifications

**Output Voltage:** 24 VDC  $\pm 10\%$  @ 1.5A rated current

**Dimensions:** 1.40" x 3.50" x 2.10"  
(35 mm x 90 mm x 54.5 mm) (W x H x D)

### 24 V @ 40 mA 4-20 mA Output Power Supply

Not only can the ProVu power the input sensor, but an additional power supply of 24 V @ 40 mA is provided with the 4-20 mA output option to power the 4-20 mA output.

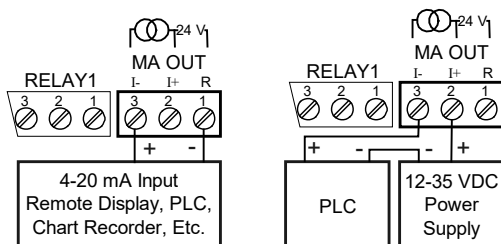

## ADVANCED DISPLAY FEATURES

### Dual-Line Makes All the Difference

The main display can be programmed to indicate PV, maximum (peak), minimum (valley), alternating maximum/minimum, one of eight alarm set points, or Modbus input. The secondary display can be configured to display engineering units, set points, user defined messages, or simply turned off.

The ProVu's dual-line display makes all the difference both when programming the instrument and when using it in the field. When programming the instrument, the dual line display prompts for the needed information and also helps you keep track of where you are in the setup process. When using the instrument, the dual line display provides more information such as displaying the input in two different scales like height and volume for a level application. We call this the Dual-Scale feature.

### Programming Assistance

The ProVu's dual-line display makes programming the instrument much easier because the secondary display prompts for the needed information and also helps you keep track of where you are in the setup process.



The ProVu is prompting for the value for Input 2 and displaying the default value of 100 mV. The "0" is brighter than the rest of the digits indicating that it is the number that will be changed by the Up arrow.



The ProVu is now prompting for what the user wants Display 2 to be; that is the value that corresponds to 100 mV. In this case Display 2 is currently set to 100.00.

### Bright & Optional Super-Bright Display

The standard ProVu's display is bright enough for most applications, including moderate sun exposure. However, for direct sunlight exposure the ProVu is available with super-bright LEDs that make it possible to read the ProVu even in direct sunlight. Both versions of the ProVu have eight levels of adjustable intensity.

### Rounding Feature for Even Steadier Display

The rounding feature is used to give the user a steadier display with fluctuating signals. It causes the display to round to the nearest value according to the rounding value selected (1, 2, 5, 10, 20, 50, or 100). For example, with a rounding value of 10, and an input of 12346, the display would indicate 12350.

### Dual-Scale Display Feature

The PD6100 has a rather unique, and very flexible dual-scale capability; a second scaled display can represent the measured input in a different form (i.e. gallons & height). This is of particular value in weight applications. Please see the examples shown below.



Volume & Height



Force & mV

### Other Uses for Second Line

The secondary display can also be used indicate units, net and gross, a tag, or even a setpoint as the following pictures illustrate:



Weight & Units



Net & Gross



mV & Setpoint



Weight & Max (Peak)

### Zero the Meter

The zero function zeroes out the display. In the case where there has been drift in the strain gauge output over time, zero is used to eliminate this drift and provide a true zero reading.

For example, if an empty scale were to display a value other than zero, the zero function would tell the meter to show zero regardless of the current input signal.



## Capture Tare

The tare function also zeroes out the display. In the case of scale weight, tare is used to eliminate container weight and provide net weight readings.

If the tare value is a known constant, such as a container weight, this may be programmed in manually. The captured tare may be reset manually with any function key or digital input.



## Automatic Unit Conversion

In addition to entering a custom unit or tag, pre-defined engineering units may be selected: lb, kg, ounce, gram, ton (short), tonne (metric ton). Automatic unit conversions are done when switching between pre-defined units, without the need for additional scaling.

The meter converts the reading according to the unit selected. (e.g. 100.00 lb = 45.36 kg = 45359.2 g = 1600 oz).

## Auto-Zero


The auto-zero feature corrects for drift that can occur over time that causes the input signal to slowly change. The meter will continue to read zero despite slow and small changes to the input signal around zero. The auto-zero sensitivity is set by the user as a percent of full scale.

## Shunt Calibration Check

The PD6100 is equipped with a means of simulating strain in a strain gauge bridge circuit, via an included shunt resistor in the meter. This technique can be used as a means of verifying the meter setup and output behavior by simulating a physical input. With no load connected, the enabling of the shunt resistor will simulate a 70% full scale load in the case of a 350  $\Omega$  Strain Bridge.

## Ratiometric Compensation


This feature compensates for changes in the strain gauge input signal that are due to variations in the internal or external excitation voltage. The compensation is effective for up to  $\pm 5\%$  variation in the excitation power supply.

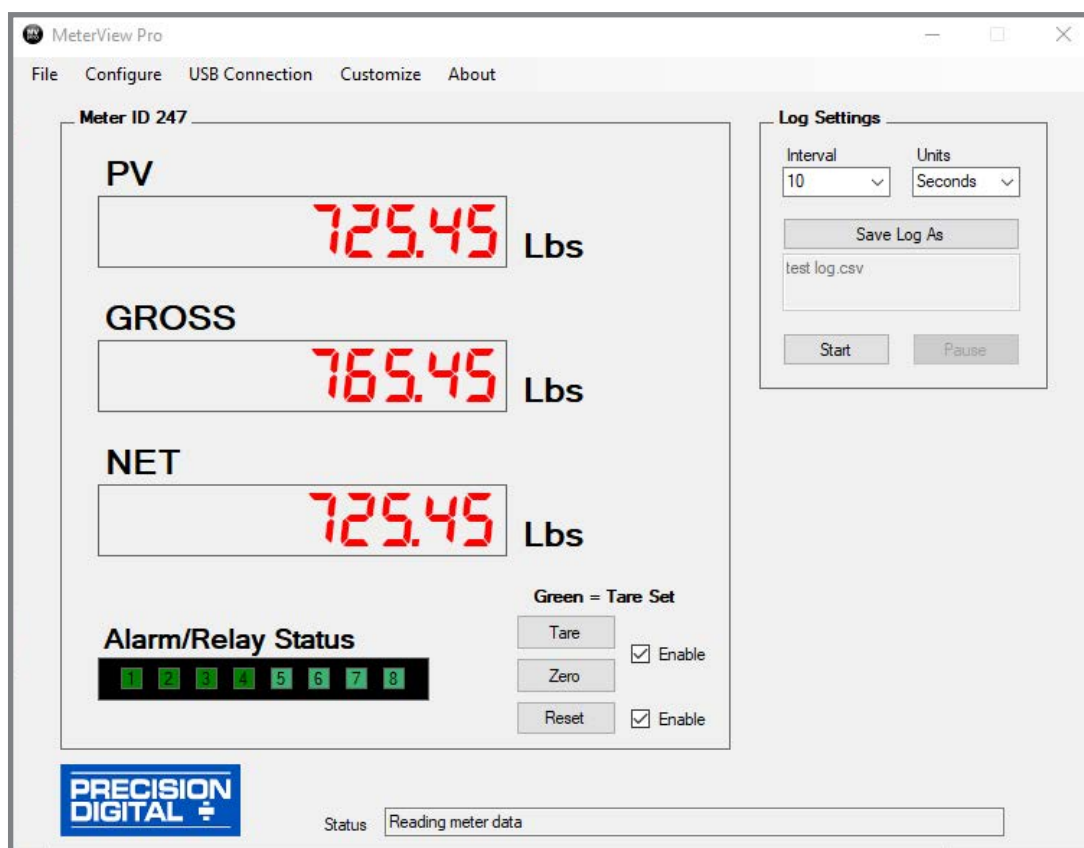

## QUICK & EASY SCALE & PROGRAMMING METHODS


The ProVu can be programmed either via the front panel push buttons or free, PC-based MeterView Pro software. MeterView Pro is resident on the ProVu and is accessed by a provided USB cable, so it is by far the easiest way to program the ProVu. The ProVu can be calibrated either by applying a known signal or scaled by entering a desired value with the front panel buttons or MeterView Pro software. Most customers will use the scaling method because it is simpler and does not require a calibrated signal source. Selecting the input to be current or voltage is done with the front panel buttons or MeterView Pro software. Once programming is completed it can be locked with a password.

### Free PC-Based MeterView Pro USB Programming Software & Cable

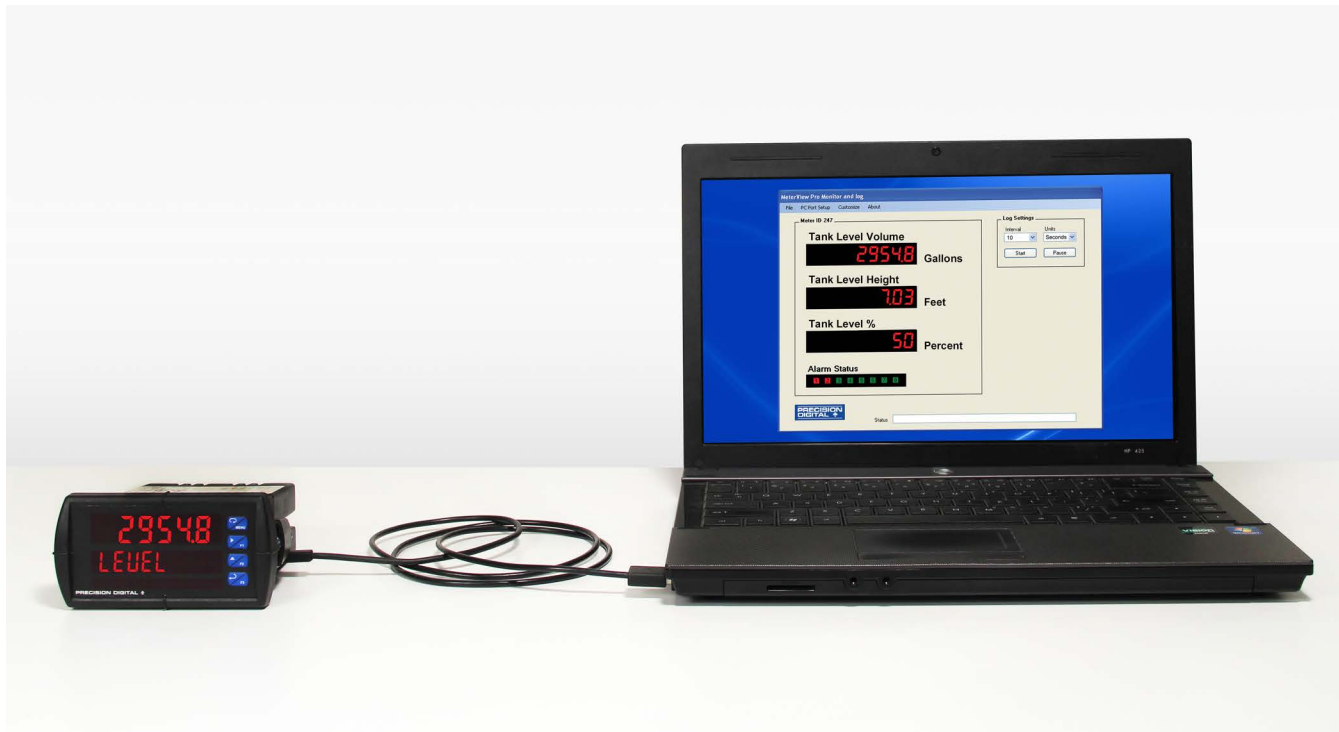


The ProVu comes preloaded with free MeterView Pro programming software that connects and installs directly to your PC with a standard USB cable, also provided free with each instrument. This eliminates the need to insert CDs, install drivers, or download software from the internet. When you connect your ProVu to your PC, MeterView Pro is downloaded to your PC, the software automatically selects the model you are programming, and you're ready to start programming immediately. Further simplifying the programming process, the ProVu can be powered from

the USB port, so no need to apply external power while programming your meter. In addition to programming, the software will also allow you to monitor, and datalog a ProVu using your PC. You can also generate and save programming files for later use.




## Setup Screen

- Select Input Type
- Enable / Disable Dual-Scale (Level)
- Set Line 1 Display Parameters
- Set Line 2 Display Parameters
- Set Analog Output Values
- Enable Manual Control
- Test Relays & Digital Outputs

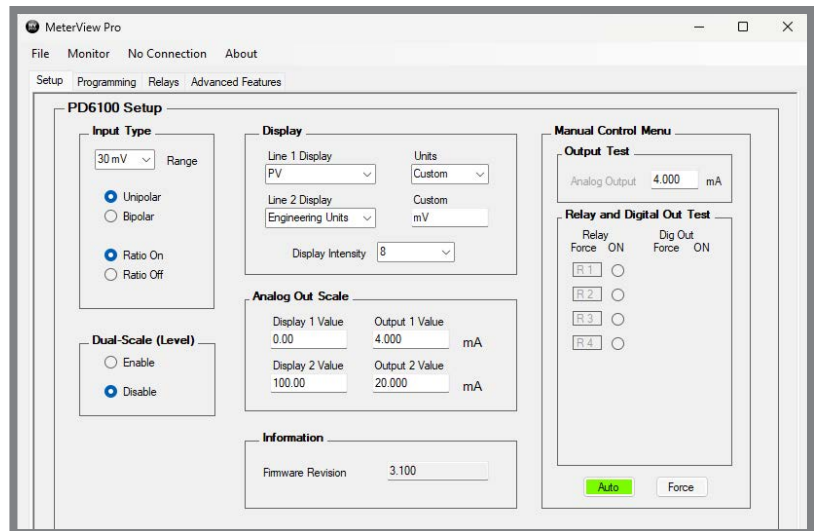


## Programming Screen

- Set Scale Values
- Select Decimal Point
- Set the Number of Points (up to 32)
- Import from Excel
- Export to Excel

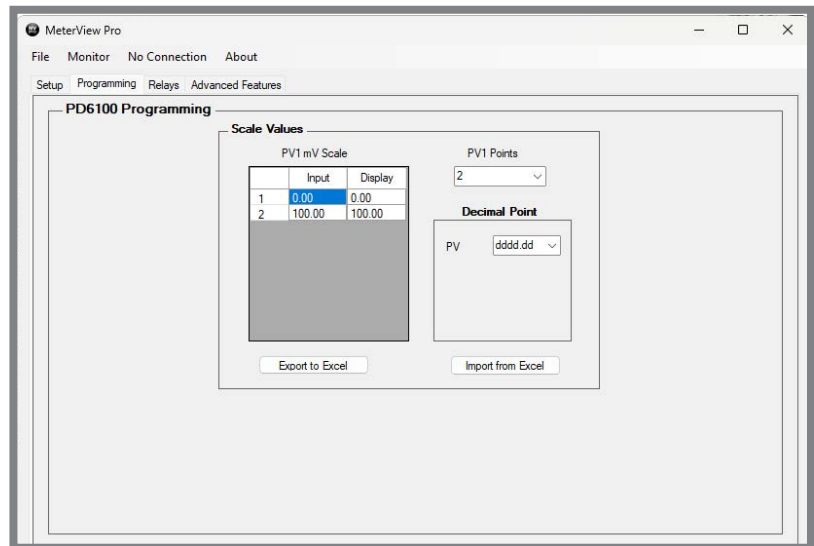

## Relays Screen

- Greatly Simplifies Programming a Variety of Relay Features
- Set Relay Action
- Set Sampling Time
- Set Set & Reset Points
- Set On/Off Time Delays
- Set Fail Safe Operation
- Set Input Break Relay Action

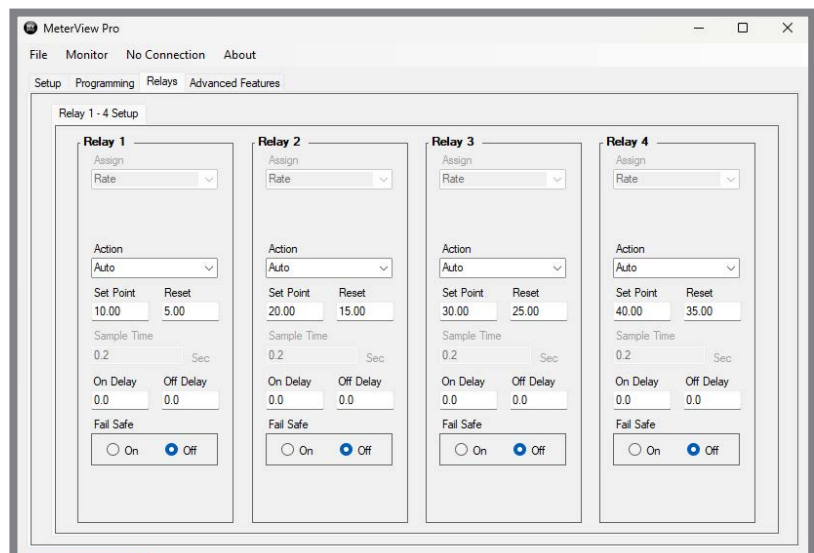




## Save/Open Configuration

At the bottom of most MeterView screens are two tabs:

1. **Get Meter Data:** This reads the programming of the meter that is currently connected to the PC.
2. **Send Meter Data:** Clicking this button, sends current MeterView programming to the meter.



The configuration file can be sent or retrieved from the directory of your choice. This makes it very easy to program multiple meters with the same programming. It is also a great backup utility as well.

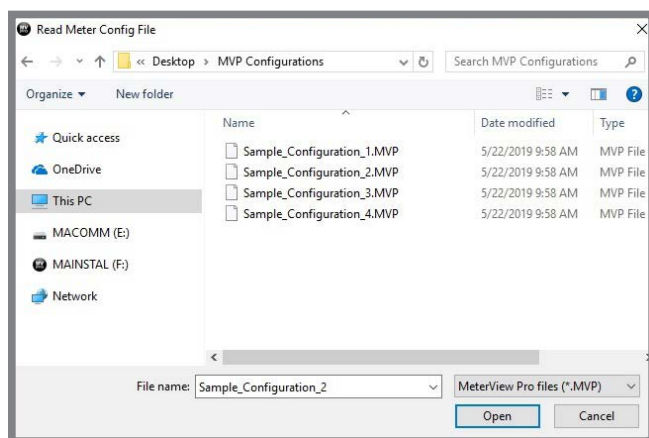

## Specifications

### System Requirements:

Microsoft® Windows® 10/11

### Communications:

Onboard USB (firmware version 4.0 or higher),  
RS-232 Adapter or RS-485 Adapter

### Meter Address: 1 - 247

### Reports:

- Data logging: Save as CSV file format
- Configuration: Save as PDC file format or print configuration


### Baud Rate: 300 - 19,200 bps

### Configuration: One meter at a time

### Protocol:

Modbus RTU (requires firmware version 4.0 or higher)

*\*Note: Windows® 32/64-bit operating systems*



## Password Protection

The Password menu is used for programming three levels of security to prevent unauthorized changes to the programmed parameter settings:

**Pass 1:** Allows use of function keys and digital inputs

**Pass 2:** Allows use of function keys, digital inputs and editing set/reset points

**Pass 3:** Restricts all programming, function keys, and digital inputs

## 4-20 mA OUTPUT & RELAYS

### 4-20 mA Analog Output


The isolated analog retransmission signal can be configured to represent the process variable (PV), maximum (peak) value, minimum (valley) value, the value for any of the eight relay set points, or Modbus input. While the output is nominally 4-20 mA, the signal will accurately accommodate under- and over-ranges from 1 to 23 mA.

The 4-20 mA output can be reversed scaled such that 4 mA represents the high value and 20 mA represents the low value. For instance, a 4-20 mA output signal could be generated as the meter went from 100.0 to 0.0.


For applications where the input was linearized by the ProVu, the 4-20 mA output will represent that linearized value.

### Connections

The ProVu can provide 40 mA at 24 VDC to power the 4-20 mA output signal or an external power supply can be used:

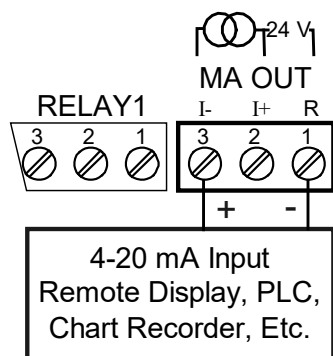

4-20 mA Output Powered by PD6100

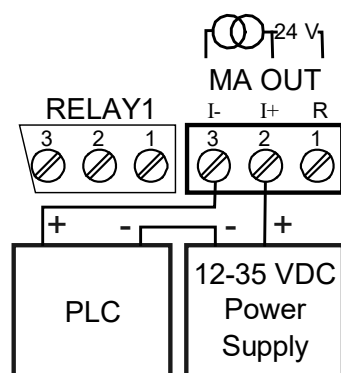


4-20 mA Output Powered by External Power Supply

The internal 24 VDC power supply powering the analog output may be used to power other devices, if the analog output is not used. The I+ terminal is the +24 V and the R terminal is the return.

The 4-20 mA output can either be programmed using the front panel push buttons or free MeterView Pro software.

### Front Panel Push Button Programming

The 4-20 mA analog output can be scaled to provide a 4-20 mA signal for any display range selected. No equipment is needed to scale the analog output; simply program the display values to the corresponding mA output signal. The Analog Output menu is used to program the 4-20 mA output based on display values.

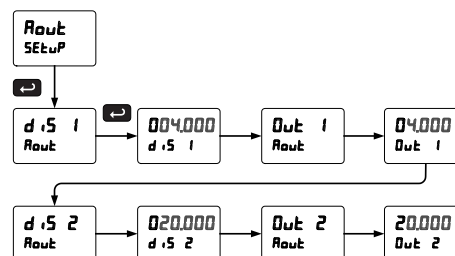

### MeterView Pro Software Programming

When a meter is programmed as shown below, the output will be 4.00 mA when the display reads 0 and the output will be 20.00 mA when the display reads 150000.

Analog Out Scale	
Display 1 Value	Output 1 Value
0	4.000 mA
Display 2 Value	Output 2 Value
150000	20.000 mA

The meter can be set up for reverse scaling as shown below: the output will be 4.00 mA when the display reads 150000 and the output will be 20.00 mA when the display reads 0.

Analog Out Scale	
Display 1 Value	Output 1 Value
150000	4.000 mA
Display 2 Value	Output 2 Value
0.00	20.000 mA

Analog Out Control	
Source	PV Value
Break	<input checked="" type="checkbox"/> 1.000
O-Range	21.000
U-Range	3.000
Max Output	23.000
Min Output	1.000

**Source:** Source for generating the 4-20 mA output (e.g. PV)

**Break:** Analog output value when loop break is detected

**Overrange:** Analog output value with display in overrange condition


**Underrange:** Analog output value with display in underrange condition

**Max:** Maximum analog output value allowed regardless of input

**Min:** Minimum analog output value allowed regardless of input

## Relays for Alarm & Control Applications

Adding relays to the ProVu meter turns it into a sophisticated alarm device as well as a powerful, yet simple, alternative to a more complicated PLC system for control applications. One such application would be pump control using the ProVu's relays in pump alternation mode. The ProVu can be equipped with up to four 3 A Form C (SPDT) internal relays and an additional four more 3 A Form A (SPST) external relays. Relays are highly user-configurable as the following screen shot from MeterView Pro indicates:

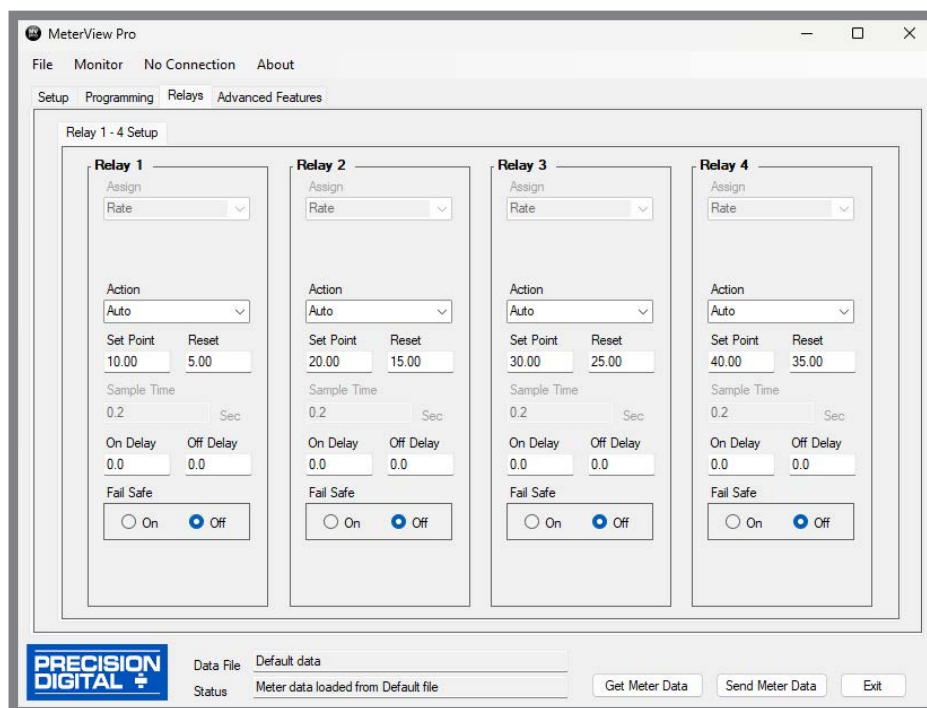

*\*Values are intended to show programming choices. They are not intended to represent an actual application.*

### Setting Set and Reset Points (HI / LO Alarms)

All relays are independent of each other and may be programmed as high or low alarms with user desired set and reset points. Setting a set point above a reset point results in a high alarm and setting a set point below a reset point results in a low alarm. Alarms have 0 – 100% deadband and set and reset points may be set anywhere in the range of the meter.

### Resetting the Relays (Action in MV Pro)

All relays are independent of each other and may be programmed to reset (*Action* in MV Pro) in the following ways:

- **Automatic:** Alarm will reset automatically once the alarm condition has cleared.
- **Automatic/Manual:** Alarm will reset automatically once the alarm condition has cleared but can also be reset using the F3 front panel button\* at any time.
- **Latching:** Alarm must be reset manually and can be done so at any time. Press the F3 front panel button\* at any time to clear the alarm.
- **Latching with Reset after Cleared:** Alarm must be reset manually and can only be done so after the alarm condition has cleared. Press the F3 front panel button\* after the alarm condition has cleared to reset the alarm.

\* Or by connecting an external switch to F4 terminal or with an optional digital input.

### Time Delay (On and Off)

In many applications it is desirable to wait before turning off or on a relay – such as waiting for a process to settle before taking action. Each relay on the ProVu can be programmed with independent on and off time delays of 0 to 999.9 seconds to achieve this.

### Relays Auto Initialization

When power is applied to the meter, the front panel LEDs and alarm relays will reflect the state of the input to the meter.

### Signal Loss or Loop Break Relay Operation

When the meter detects a break in the 4-20 mA loop, the relay will go to one of the following selected actions:

1. Turn On (Go to alarm condition)
2. Turn Off (Go to non-alarm condition)
3. Ignore (Processed as a low signal condition)

### User Selectable Fail-Safe Operation

All relays are independent of each other and may be programmed for user selectable fail-safe operation. With the fail-safe feature activated, the relays will transfer to the alarm state on power loss to the meter.

### Front Panel LEDs

The meter is supplied with four alarm points that include front panel LEDs to indicate alarm conditions. This standard feature is particularly useful for alarm applications that require visual-only indication.

### Manual Output Control

Take control of any output with this feature. All relays can be forced ON or OFF, and the 4-20 mA output signal can be set to any value within its range. When the relays and 4-20 mA output are controlled manually, an LED labeled “M” is turned on and the associated Alarm LEDs (1-8) flash every 10 seconds indicating that the meter is in manual control mode.




### Sampling Function (PV Triggered Timed Relay)

The sampling function allows the operator to set a relay as a “sampling” relay. When the PV reaches that set point, it will close that relay’s contacts for a preset period of time (0.1 to 5999.9 seconds). An example of its use may be for beer/ale fermentation. When the batch reaches a certain weight, the relay contacts would close and by some means (light, horn, etc.) alert someone to take a sample, or provide the trigger to automatically take a sample of the batch. The utility of this function can, of course, be expanded beyond sampling and be used whenever a timed relay output closure is required when the PV reaches a certain set point.

### Interlock Relay(s)

This function allows a process to use one or more very low voltage input signals or simple switch contacts to control the state of one or more internal “interlock” relays. A violation (i.e. loss of input, open switch, or open circuit) forces one or more N/O interlock relay contacts to open. One input can be used in series with a number of interlock switches, or up to eight inputs can be required to force-on one (or more) internal interlock relays. Requires PDA1044 Digital I/O module or use of on-board digital input F4. Please see *ProVu Series Safety Interlock Feature* whitepaper on our website for more information.

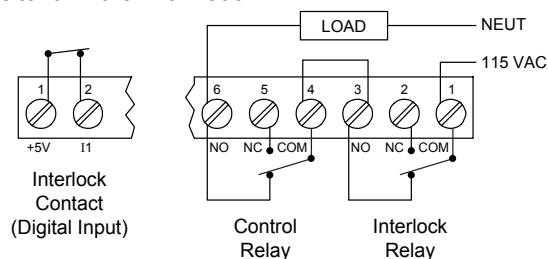

### Switching Inductive Loads

The use of suppressors (snubbers) is strongly recommended when switching inductive loads to prevent disrupting the microprocessor’s operation. The suppressors also prolong the life of the relay contacts. Precision Digital offers the PDX6901.

## SIGNAL INPUT CONDITIONING

There are many applications in the industrial world that can't be satisfied with simple, two-point linear scaling so the ProVu has advanced linearization capabilities to handle these types of applications. MeterView Pro programming software can be used to program the 32 points.

### 32-Point Linearization

The most common way to linearize a non-linear signal is to break it up into smaller ranges that are more linear than the overall range. The ProVu is available with up to 32 points of linearization and if dual scale feature is used, the second PV can have up to eight points of linearization. The linearization data can be imported from an Excel spreadsheet or can be exported from MeterView Pro to an Excel spreadsheet. The following screen shot from MeterView Pro shows PV1 with 9 points of linearization and PV 2 with 5 points of linearization:


The screenshot shows the MeterView Pro software interface. The 'PD6100 Programming' window is open, displaying the 'Scale Values' section. It includes tables for PV1 mV Scale and PV2 mV Scale, and a 'Decimal Point' section. An Excel spreadsheet is also shown, displaying the data imported from the software.

PV1 mV Scale	PV1 Points	PV2 Points	PV2 mV Scale
1 4.00 0	9	5	1 4.00 0.0
2 6.00 18000			2 8.00 21.5
3 8.00 43000			3 12.00 46.0
4 10.00 72000			4 16.00 75.0
5 12.00 92000			5 20.00 100.0
6 14.00 122000			
7 16.00 150000			
8 18.00 192000			
9 20.00 200000			

Scale values can also be imported from an Excel spreadsheet.

## LOAD CELL SUMMING APPLICATION

A typical application for load cells is in a tank weighing operation. In the following example, this three-legged tank has a load cell under each leg. The three load cells are wired locally in parallel within a junction box. The combined signals are then connected to the PD6100. During field calibration, the weight of the empty tank (zero point) and the full tank weight (full scale) are programmed into the meter. Over time, the zero feature on the PD6100 can account for obstacles like sludge buildup on the bottom of the tank when empty.

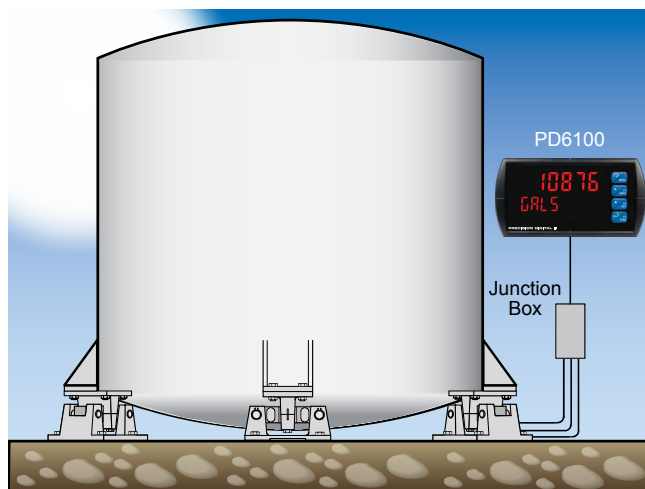



## DIGITAL COMMUNICATIONS

### Modbus® RTU Serial Communications

With the purchase of a serial communication adapter, ProVu meters can communicate with any Modbus Master device using the ever-popular Modbus communications protocol that is included in every ProVu. In addition to the typical Modbus capabilities of reading PVs and writing set points, below are some examples of other things that can be done with the meter's Modbus communications:

- Send a 6-character message to secondary display upon event
- Convert a digital value to a 4-20 mA signal
- Remote user control (i.e. change set points, acknowledge alarms)
- Input a Modbus digital PV (in place of analog input)
- Remote override of any or all relays and analog outputs



Modbus PV Input



Remote Message



Click here for more information on the ProVu's Modbus capabilities

### Serial Communication Devices

Precision Digital provides a variety of serial communication devices to interface the ProVu meter with other devices. For more information visit [predig.com/ProVuSerialDevices](http://predig.com/ProVuSerialDevices).

### PDA1232 & PDA1485 Communication Modules

Serial communications on the ProVu meter can be added anytime with external PDA1232 (RS-232) or PDA1485 (RS-485) communication adapters. Free Modbus protocol is included for use with the ProVu serial communications modules.

### Serial Adapters & Converters\*



**PDA1232**  
ProVu RS-232  
Serial Adapter



**PDA1485**  
ProVu RS-485  
Serial Adapter



**PDA7485-I**  
RS-232 to RS-422/485  
Isolated Converter



**PDA8232-N**  
USB to RS-232  
Non-Isolated  
Converter



**PDA8485-I**  
USB to  
RS-422/485  
Isolated Converter



For more  
info on serial  
converters  
click here.

\*All adapters and connectors supplied with appropriate cables.


## FIELD EXPANSION MODULES

Add functionality to the ProVu in the field with easy-to-install external expansion modules. Add RS-232 or RS-485 communications, I/O modules (up to 2), and 4-relay expansion module. The menu items for these modules do not appear until the module is connected, simplifying the basic menu. Relay and digital I/O modules are shown below with optional DIN rail mounting kit, P/N PDA1002.

### PDA1044 I/O Expansion Module


Four digital inputs and four digital outputs are available per expansion module. The ProVu meter will accept two of these modules. External digital inputs can function similarly to the front panel function keys or on-board digital input F4. They can be configured to trigger certain events (i.e. acknowledge/reset alarms, reset max and/or min values, disable/enable all output relays, and hold current relay states), provide direct menu access point, or mimic front panel keys. The I/O module can be used to configure the ProVu remotely, in essence giving the user control of the four front panel push buttons. This feature is particularly useful if the meter is mounted inside an explosion-proof enclosure.

Digital outputs can be used to remotely monitor ProVu's alarm relay output states, or the states of a variety of actions and functions executed by the meter.

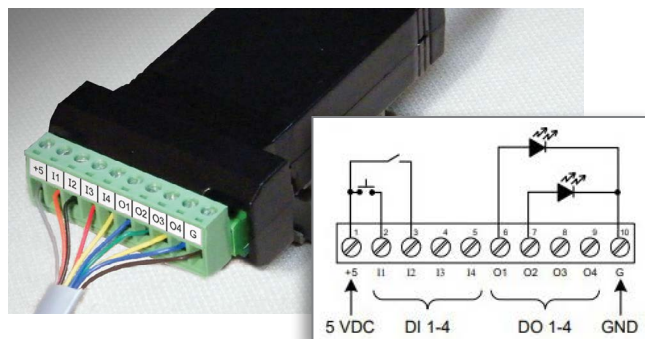

### PDA1004 Relay Expansion Module

An external module containing four 3 A Form A (SPST) relays can be added to the ProVu at anytime. Removable screw terminal blocks accept 12 to 22 AWG wire.

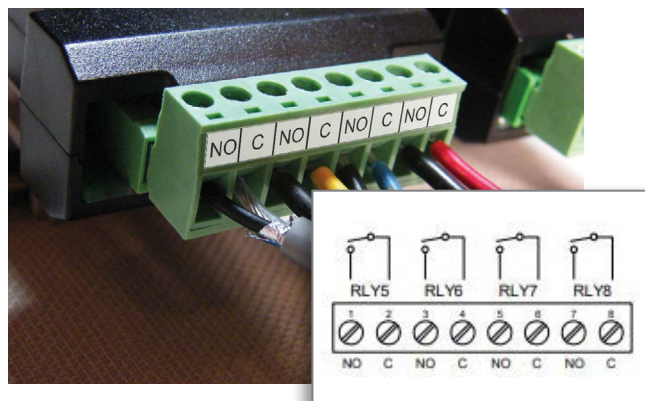

## PHYSICAL FEATURES

The ProVu is designed for ease-of-use in industrial applications. Considerations include a UL Type / NEMA 4X front panel, wide operating temperature range, removable screw terminal connectors, snap in place mounting brackets, forgiving panel cutout requirement, and UL Listing for electrical safety. All of these features are backed by a 3-year warranty.

### UL Type / NEMA 4X Front Panel



Not only does the ProVu's front panel UL Type / NEMA 4X approval indicate it is waterproof, but it also indicates it is rugged. Part of the UL Type / NEMA 4X test is to drop a 2 inch solid stainless steel ball from 8 feet on top of the meter's faceplate.

### Wide Operating Temperature Range

The ProVu can operate from -40 to 65°C (-40 to 150°F) meaning it can be installed in a wide variety of indoor and outdoor industrial applications. And over this range, the ProVu will drift no more than 0.005% of calibrated span/°C max from 0 to 65°C ambient and 0.01% of calibrated span/°C max from -40 to 0°C ambient.

### Removable Screw Terminal Connectors

Industrial applications require screw terminal connections for easy field wiring and the ProVu goes one step further in convenience by also making them removable.



Easy Plug-in Removable Terminal Connectors



### Secured-in-Place Rugged Mounting Brackets

If you're installing the ProVu outdoors in the hot or cold weather, the last thing you want to do is fumble around with mounting brackets that don't stay in place. The ProVu's mounting brackets can be easily secured into place and then screwed down to the panel. The brackets are rugged so they can be tightened to the panel to provide a solid NEMA 4X seal.




Easy Secured-in-Place Mounting Brackets

### Forgiving Panel Cutout Requirement

The ProVu's bezel has been oversized to allow for not perfectly executed panel cutouts where NEMA 4X seal is not required.

Over-Sized Bezel to Completely Cover Panel Cutouts

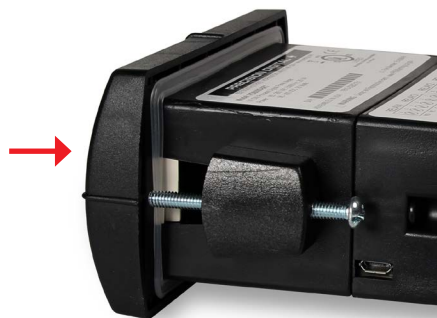

### UL Listing for Electrical Safety

**UL & C-UL Listed:** USA & Canada  
UL 508 Industrial Control Equipment

**UL File Number:** E160849


**Front Panel:** UL Type 4X, NEMA 4X, IP65; panel gasket provided

**Low Voltage Directive:** EN 61010-1:2010 Safety requirements for measurement, control, and laboratory use

### USB Port for Easy Connection to MeterView Pro Free Software



USB cable conveniently plugs into side of ProVu meter

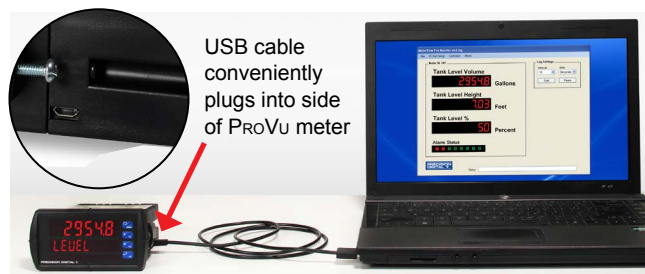

## VIDEOS TO WATCH



### ProVu Multi-Pump Alternation

Learn How to Use the ProVu as a Pump Controller.



### ProVu Function Keys

Learn How the ProVu's Function Keys Increase the Utility of the ProVu.



### Connect a ProVu to a PC Using MeterView Pro

Learn How Easy it is to Use MeterView Pro Software.



### Introduction to the Helios

Learn About the Large Display Version of the ProVu.

## OPERATIONAL FEATURES

### Function Keys, F4 Terminal, Digital Inputs

There are three ways the user can interact with the ProVu to perform a variety of useful functions:

#### 1. Three Front Panel Function Keys

The default settings for the function keys are:



Zero Meter




Reset Tare



Tare

#### 2. F4 On-Board Digital Input


The PD6100 includes a digital input as standard. This digital input can operate with the tare, reset tare, or interlock relays feature, force relays on from a signal from a PLC or relay on other equipment, and much more. This is ideal for installations where the meter is inaccessible behind a cover, or where an additional function key is needed for customized operation.

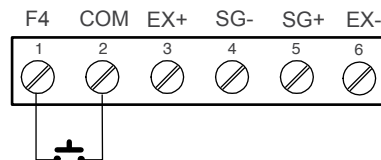

The F4 terminal is particularly useful for wiring up a remote switch to reset the relays as shown here:



#### 3. Optional 4 Digital Input/Output Module PDA1044

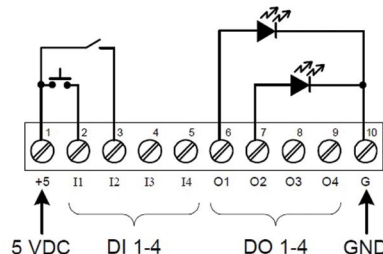

With these three methods, the ProVu can be programmed to trigger certain events (i.e acknowledge relays, reset max and/or min, disable/enable output relays, or hold current relay states), provide direct menu access points and more.



## Function Key, Digital Inputs, & Digital Outputs Descriptions

The following table describes the actions that ProVu function keys and digital inputs can be programmed to perform. The table also describes how the digital outputs can be used to remotely monitor the ProVu's alarm relay states, or the states of a variety of actions and functions executed by the meter.

Display	Description	Item
rSt H.	Reset the stored maximum display value	FK, DI, DO
rSt Lo	Reset the stored minimum display value	FK, DI, DO
rSt HL	Reset the stored maximum & minimum display values	FK, DI, DO
tArE	Capture tare and zero the display	FK, DI, DO
rSt tr	Reset captured tare and resume normal operation	FK, DI, DO
rELAY	Directly access the relay menu	FK, DI
SEt 1*	Directly access the set point menu for relay 1 (*through 8)	FK, DI
rLY d	Disable all relays until a button assigned to enable relays (rLY E) is pressed	FK, DI
rLY E	Enable all relays to function as they have been programmed	FK, DI
d HoLd	Hold current relay states and analog output as they are until a button assigned to enable relays (rLY E) is pressed	FK, DI
d HoLd	Hold the current display value, relay states, and analog output momentarily while the function key or digital input is active. The process value will continue to be calculated in the background.	FK, DI
Ln1 H.	Display maximum display value on line 1	FK, DI
Ln1 Lo	Display minimum display value on line 1	FK, DI
Ln1 HL	Display maximum & minimum display values on line 1	FK, DI

Display	Description	Item
Ln2 mV	Display the mV input on line 2	FK, DI
Ln2 H.	Display maximum display value on line 2	FK, DI
Ln2 Lo	Display minimum display value on line 2	FK, DI
Ln2 HL	Display maximum & minimum display values on line 2	FK, DI
ZEro	Zero the display ( <i>this is different from capture tare because it cannot be reset</i> )	FK, DI
F On 1*	Force relay 1 (*through 4) into the on state. This is used in conjunction with a digital input expansion module to achieve interlock functionality.	FK, DI
Control	Directly access the Manual Control menu	FK, DI
d ISAbL	Disable the selected function key or digital I/O	FK, DI
AcK	Acknowledge all active relays that are in a manual operation mode such as auto-manual or latching	FK, DI, DO
rESEt	Directly access the reset menu	FK, DI
mEnu	Mimic the menu button functionality (digital inputs only)	DI
rIGHt	Mimic the right arrow/F1 button functionality (digital inputs only)	DI
uP	Mimic the up arrow/F2 button functionality (digital inputs only)	DI
EntEr	Mimic the enter/F3 button functionality (digital inputs only)	DI
ALAr 1*	Provide indication when alarm 1 (*through 8) has been triggered (digital outputs only)	DO

FK: Function Keys    DI: Digital Inputs    DO: Digital Outputs




Watch video about the programmable function keys, digital inputs, and all the capabilities these features offer on the ProVu Series.





## Four-Position Control Station for Remote Operation of ProVu Buttons

The PD6100's four programming and operations buttons can be remotely controlled by using the PDA2364-MRUE 4-button control station accessory as shown in the diagram below.

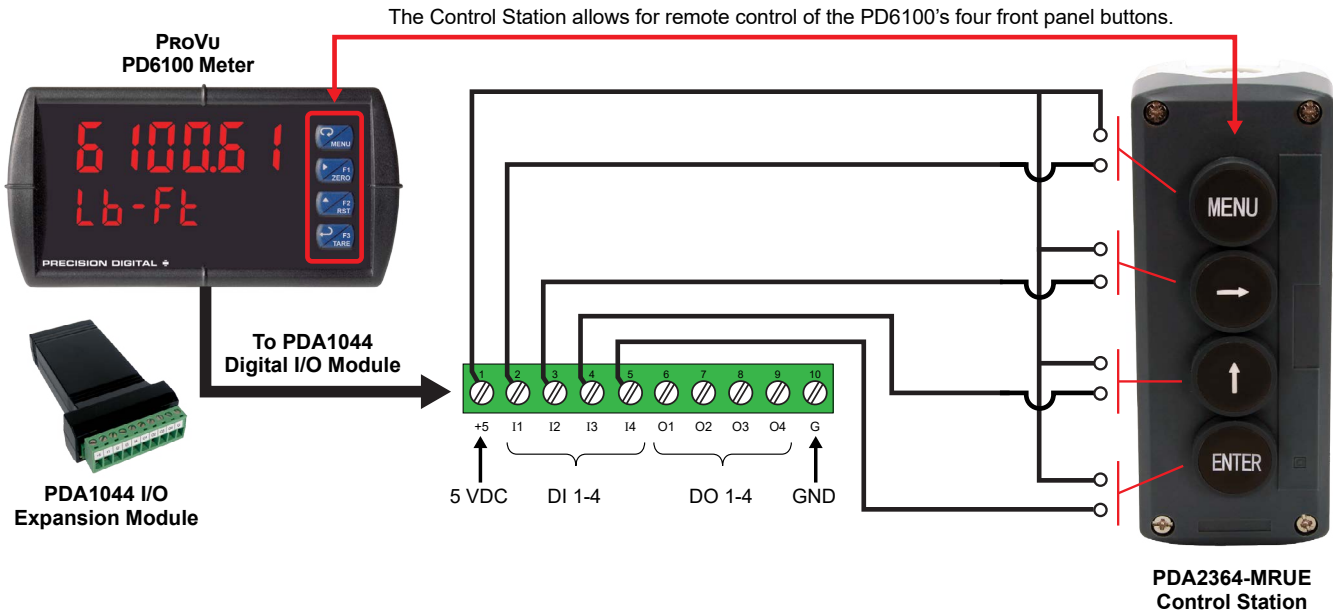

## Plastic Control Stations For The ProVu PD6100

The PDA2360 series of plastic control stations provide a convenient way to remotely control devices such as Precision Digital's ProVu PD6100. The PDA2364-MRUE four-position control station mimics the ProVu's four front panel buttons: Menu, Right Arrow, Up Arrow, and Enter. The PDA2361-T can be used to tare the meter, the PDA2360-E is an emergency stop button, the PDA2361-A is used to acknowledge an alarm, and the PDA2361-Q is to silence an alarm.



- Complete Pre-Assembled Stations
- Normally Open (NO) Spring Return Plastic Bezel Pushbuttons
- Trigger Action Turn to Release Pushbutton (PDA2360-E only)
- IP65 / NEMA 4, 4X and 13 Rated
- Four-Position Control Station for Remote Operation of ProVu Buttons
- Wall Mountable

PDA2360 Series Control Stations	
Model	Description
PDA2360-E	1 Emergency Stop Button
PDA2361-A	1 Black Ack Button
PDA2361-Q	1 Black Silence Button
PDA2361-T	1 Black Tare Button
PDA2364-MRUE	4 Black Buttons: Menu, Right, Up, Enter

## UL TYPE / NEMA 4 & 4X FIELD ENCLOSURES

Precision Digital offers a variety of rugged enclosures that provide a high degree of protection against harsh operating environments. Thermoplastic and stainless steel UL Type / NEMA 4X, and painted steel UL Type / NEMA 4 enclosures for up to 10 ProVu meters are available. In addition, Precision Digital offers a Light/Horn that can be mounted to most of these enclosures to provide visual and audible indication of alarms. Many enclosures also have sufficient space to house Precision Digital's model PDA1024-01 24 V power supply to provide power to sensors that require more than the 200 mA that the ProVu can provide.



**Need help selecting  
the right enclosure?**  
[www.predig.com/esu](http://www.predig.com/esu)



Download free 3-D CAD files of these  
instruments to simplify your drawings!

[predig.com/documentation-cad](http://predig.com/documentation-cad)

### Plastic Enclosures (Externally Mounted)

#### PDA2300 Series (Covers with Hinge & Hasp)

This is Precision Digital's most economical line of enclosures for the ProVu. The meter mounts through a hinged cover with a SS hasp allowing for easy access to meter wiring. Enclosures are available for 1 through 10 ProVus. The enclosure is large enough to mount the PDA1024-01 24 V sensor supply in.



PDA2301



PDA2310

#### PDA2800 Series (Covers with Screws)

This is Precision Digital's smallest line of enclosures for the ProVu. The meter mounts through the cover that screws to the base of the enclosure. Available for 1 and 2 ProVus.



PDA2811



PDA2812

### Plastic Enclosures (Internally Mounted)

#### PDA3400 Series (Covers with screws)

This is Precision Digital's only line of enclosures for the ProVu where the meter is fully housed inside the enclosure. Enclosures are available for 1, 2 and 3 ProVus.



PDA3407



PDA3412

### Stainless Steel Enclosures (Externally Mounted)

#### PDA2600 Series (Covers with Hinge & Hasp)

This is Precision Digital's stainless steel line of enclosures for the ProVu. The meter mounts through a hinged cover with a SS hasp allowing for easy access to meter wiring. Enclosures are available for 1 through 6 ProVus.



PDA2604-1



PDA2606

### Steel Enclosures (Externally Mounted)

#### PDA2700 Series (Covers with Hinge & Hasp)

This is Precision Digital's painted steel line of enclosures for the ProVu. The meter mounts through a hinged cover with a hasp allowing for easy access to meter wiring. Enclosures are available for 1 through 6 ProVus.





PDA2704-1



PDA2706

## LIGHT/HORN & BUTTON MOUNTED TO ENCLOSURE

ProVu Meter in a PDA2301 Enclosure with MOD-LH Light/Horn and Button.  
Enclosure & MOD-LH Sold Separately. Assembly Required.

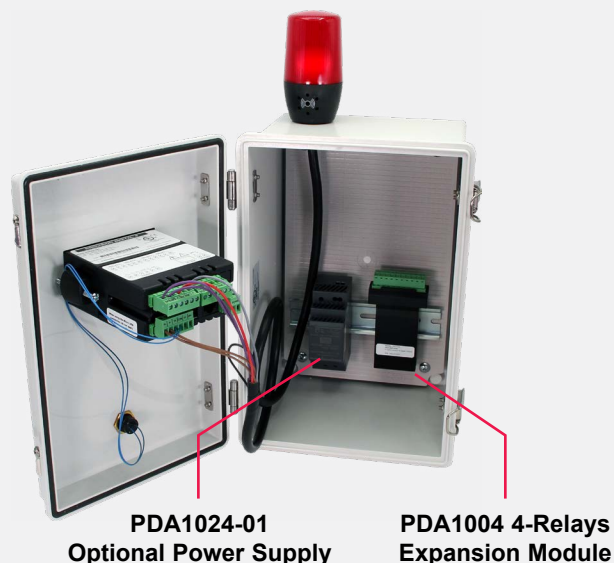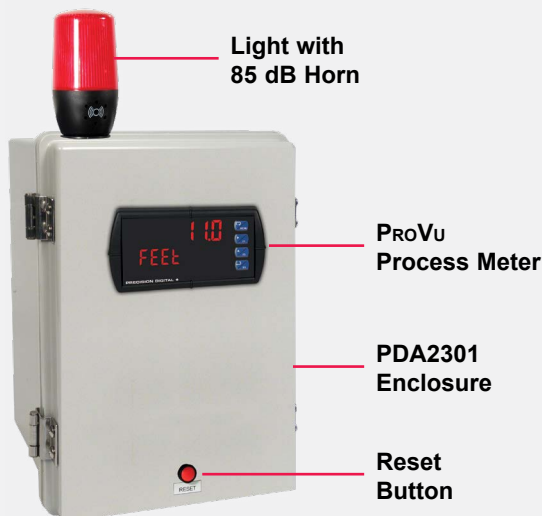

### Overview

Precision Digital offers a wide variety of UL Type / NEMA 4 & 4X enclosures that can be equipped with MOD-LH Light/Horn and Button. When MOD-LH is ordered, the accompanying enclosure on the order comes with the holes pre-drilled for the Light/Horn and the Button and the user performs the mounting and wiring. Meter and enclosure are sold separately. The Light/Horn and the Button can also be ordered as separate items and the user performs all hole-drilling, mounting and wiring as desired. The light and horn can be controlled independently of each other via separate relays on the ProVu meter; and since the meter's relays can be reset in a variety of ways, there are several ways the Light/Horn option can operate. For instance, the horn can be programmed to silence at any time via the Button or F3 front panel button on the ProVu, and light to reset automatically when the alarm clears as the following table illustrates:

Relay #	Connected to	Default Reset Mode
1	Flashing Light <sup>(1)</sup>	Auto reset
2	Horn	Silence with Button at any time
3	User Device	As user desires
4	User Device	As user desires


1. Light can be wired to flash or stay steady on.

2. See page 10 for additional ways the relays can be programmed

**Note:** The Light/Horn accessory is powered from the 200 mA sensor power supply; so when it is installed, there is less power available for the sensor. See MOD-LH Light/Horn, Sensor Power Supply specification on page 26 for details.

### Dimensions

Units: Inches (mm)

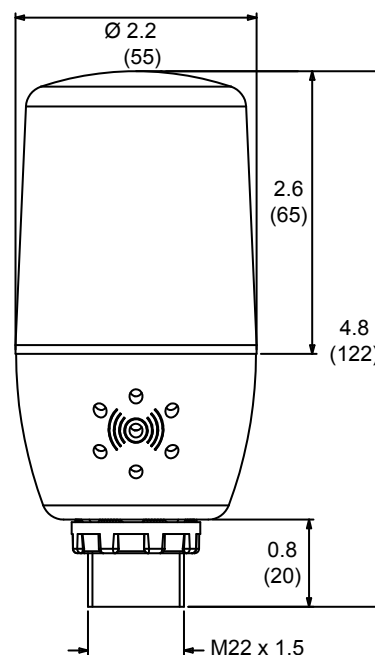

Click here to watch the Light/Horn Video

## PDA1024-01 24 VDC DIN Rail Power Supply

Precision Digital's PDA1024-01 24 VDC power supply can be used to power the Light/Horn or other customer supplied devices as shown here.



## PDA1024-01 Power Supply Installed in a PDA2301 Enclosure



**PDA1024-01**  
**24 VDC Power Supply**




<b>Input Voltage</b>	85 ~ 264VAC 120 ~ 370VDC
<b>Output Voltage</b>	24 VDC $\pm 10\%$ @ 1.5A rated current
<b>Input Frequency</b>	47 ~ 63Hz
<b>AC Current</b>	0.88A/115VAC 0.48A/230VAC
<b>Connections</b>	Two terminals provided for +V and -V to simplify wiring of multiple devices
<b>Operating Temperature</b>	-20° to 60°C
<b>Safety Standards</b>	UL60950-1, TUV EN60950-1 Approved, Design refer to EN50178
<b>EMC</b>	Compliance to EN55011, EN55022 (CISPR22) Class B, EN61000-3-2, -3 EN61000-4-2, 3, 4, 5, 6, 8, 11, ENV50204, EN55024, EN61000-6-1, EN61204-3 Light industry, Criteria A
<b>Dimensions</b>	1.40" x 3.50" x 2.10" (35 mm x 90 mm x 54.5 mm) (W x H x D)

## Wiring Connections for MOD-LH Models

The following diagram is for MOD-LH models with a single color light. See MOD-LH manual for wiring connections for MOD-LH5CB1 and MOD-LH3CB1-RYG models.

### Using External Power Supply (PDA1024-01)

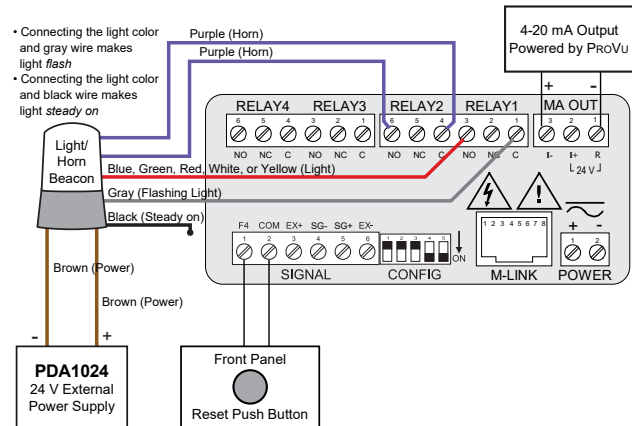



# Complete Product Line of Displays and Controllers

## IN ALL SHAPES, SIZES & LOCATIONS



Big, Bright Displays  
For Indoor or Outdoor  
in Bright Sunlight



Large Dual-Line  
6-Digit Display



24 VDC  
Transmitter  
Power Supply



MeterView Pro USB  
Programming Software



Universal 85-265  
VAC or 12-24 VDC  
Input Power  
Options



4-20 mA, 0-10 V,  
Thermocouple, RTD,  
Strain Gauge, High  
Voltage, & Modbus Inputs



Up To Four  
3 A Form C  
Relays (SPDT)



SP Ex CE IECEx



CE UL

### EXPLOSION-PROOF ProtEX-MAX Series

- NEMA 4X, IP68 Rated Enclosure
- CapTouch Through-Glass Buttons
- Operating Temperature of -55 to 65°C
- Worldwide Approvals

### LARGE DISPLAYS Helios Series

- 1.8" Digits Readable From 100 Feet
- UL Type / NEMA 4X, IP65 Rated Enclosure
- Operating Temperature of -40 to 65°C
- UL and C-UL Approved

### PANEL METERS ProVu Series

- UL Type / NEMA 4X, IP65 Rated Front
- Programmable Function Keys
- UL, C-UL, and CE Approvals
- 1/8 DIN Size

Go to [PREDIG.COM](http://PREDIG.COM) for details on ProVu, ProtEX-MAX and Helios Series Meters




# No More Sun Glare On Your Panel Meter Display!

## NEW PDA18DINSH Sun Hood

The PDA18DINSH Sun Hood improves the readability of 1/8 DIN digital panel meters when they are mounted in direct sunlight by shading the instrument from the sun.

The Sun Hood is made from 18 gauge 316 stainless steel and mounts between the 1/8 DIN digital panel meter and the panel. In addition, a gasket is provided that installs between the Sun Hood and the panel to provide a NEMA 4X seal to the panel. The whole assembly is held in place by the panel meter's mounting brackets.

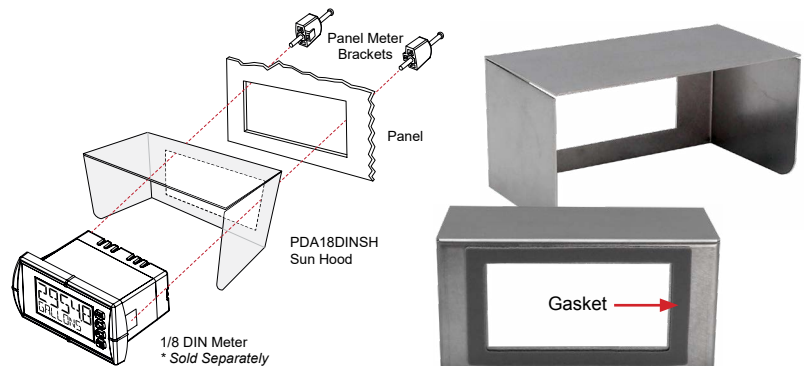


- Provides Shade for 1/8 DIN Digital Panel Meters
- Made from 18 Gauge 316 Stainless Steel
- Easy Mounting Requires no Drilled Holes in the Panel
- Includes Gasket to Maintain NEMA 4X Seal

### SPECIFICATIONS


Model	PDA18DINSH
Material	18 gauge 316 stainless steel
Overall	2.99" x 5.68" x 2.99" (H x W x D)
Dimensions	(75 mm x 144 mm x 75 mm)
Weight	0.9 lb (0.4 kg)
Gasket Material	Silicone Foam

## DIMENSIONS

Units: Inches (mm)

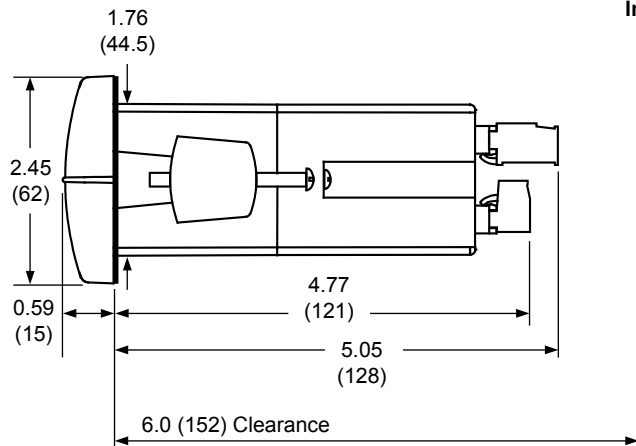

Side View

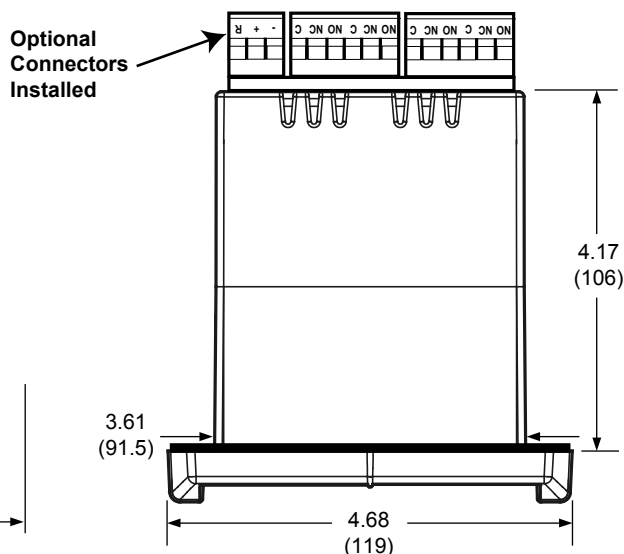

Top View

### Notes:



1. Panel cutout required: 1.772" x 3.622" (45 mm x 92 mm)
2. Panel thickness: 0.040 - 0.250" (1.0 mm - 6.4 mm)
3. Mounting brackets lock in place for easy mounting
4. Clearance: Allow 6" (152 mm) behind the panel



Download free 3-D CAD files of these instruments to simplify your drawings!

[predig.com/documentation-cad](http://predig.com/documentation-cad)

## CONNECTIONS

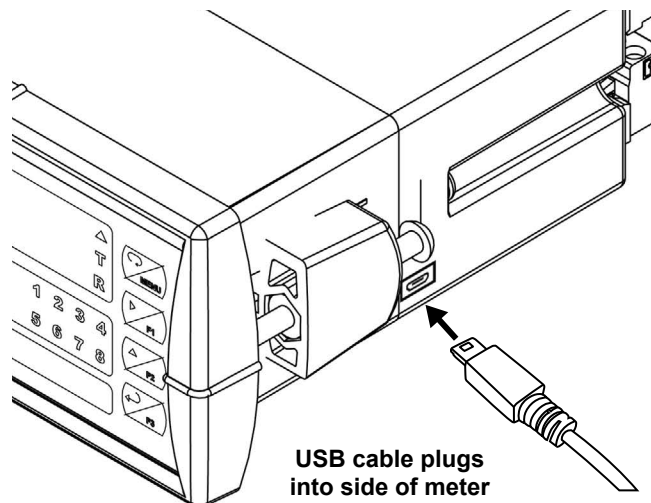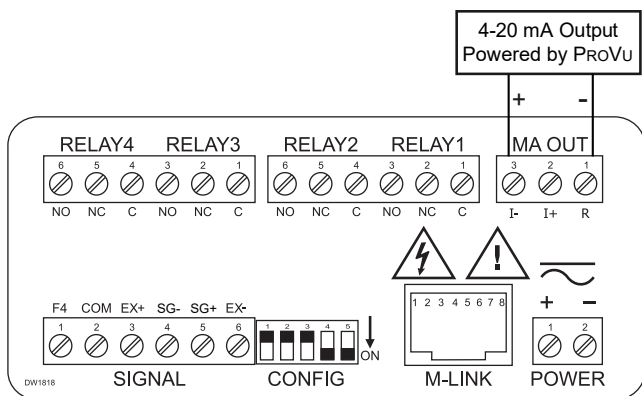

## SPECIFICATIONS

Except where noted all specifications apply to operation at +25°C.

### General

<b>Display</b>	Display Line 1: 0.60" (15 mm) high, red LEDs Display Line 2: 0.46" (12 mm) high, red LEDs 6 digits each (-99999 to 999999), with lead zero blanking
<b>Display Intensity</b>	Eight user selectable intensity levels. Default value is six.
<b>Display Update Rate</b>	5/second (200 ms)
<b>Overrange</b>	Display flashes 999999
<b>Underrange</b>	Display flashes -999999
<b>Display Assignment</b>	Display Line 1: PV1, PV2, PCT, max & min, set points, PV & units, net & gross weight, Modbus input, millivolts. Display line 2: Same as Display Line 1; plus units, tag or turned off.
<b>Units</b>	Predefined: lb, kg, ounce, gram, ton, metric ton (tonne); and custom units.
<b>Programming Methods</b>	Four front panel buttons, digital inputs, PC and MeterView Pro software, or Modbus registers.
<b>Noise Filter</b>	Programmable from 2 to 199 (0 will disable filter)
<b>Filter Bypass</b>	Programmable from 0.1 to 99.9% of calibrated span
<b>Recalibration</b>	All ranges are calibrated at the factory. Recalibration is recommended at least every 12 months.
<b>Max/Min Display</b>	Max/min readings reached by the process are stored until reset by the user or until power to the meter is cycled.
<b>Rounding</b>	Select 1, 2, 5, 10, 20, 50, or 100 (e.g. rounding = 10, value = 123.45, display = 123.50).
<b>Tare</b>	There are three modes of tare operation: Capture Tare, Programmable Tare, and Off.
<b>Password</b>	Three programmable passwords restrict modification of programmed settings. Pass 1: Allows use of function keys and digital inputs Pass 2: Allows use of function keys, digital inputs and editing set/reset points Pass 3: Restricts all programming, function keys, and digital inputs.
<b>Non-Volatile Memory</b>	All programmed settings are stored in non-volatile memory for a minimum of ten years if power is lost.
<b>Power Options</b>	85-265 VAC 50/60 Hz; 90-265 VDC, 20 W max; 12-24 VDC, 12-24 VAC, 15 W max. Powered over USB for configuration only.
<b>Fuse</b>	Required external fuse: UL Recognized, 5 A max, slow blow; up to 6 meters may share one 5 A fuse
<b>Normal Mode Rejection</b>	Greater than 60 dB at 50/60 Hz

<b>Isolation</b>	4 kV input-to-power line 500 V input-to-output (powered by external supply)
<b>Overvoltage Category</b>	Installation Overvoltage Category II: Local level with smaller transient overvoltages than Installation Overvoltage Category III.
<b>Environmental</b>	Operating temperature range: -40 to 65°C (-40 to 149°F) Storage temperature range: -40 to 85°C (-40 to 185°F) Relative humidity: 0 to 90% non-condensing
<b>Max Power Dissipation</b>	Maximum power dissipation limited to 15.1 W
<b>Connections</b>	Removable screw terminal blocks accept 12 to 22 AWG wire, RJ45 for external relays, digital I/O, and serial communication adapters.
<b>Enclosure</b>	1/8 DIN, high impact plastic, UL 94V-0, color: black
<b>Front Panel</b>	UL Type / NEMA 4X, IP65
<b>Mounting</b>	1/8 DIN panel cutout required: 3.622" x 1.772" (92 mm x 45 mm) Two panel mounting bracket assemblies are provided.
<b>Tightening Torque</b>	Screw terminal connectors: 5 lb-in (0.56 Nm)
<b>Overall Dimensions</b>	4.68" x 2.45" x 5.64" (119 mm x 62 mm x 143 mm) (W x H x D)
<b>Weight</b>	9.5 oz (269 g)
<b>Warranty</b>	3 years parts & labor. See Warranty Information and Terms & Conditions on <a href="http://www.predig.com">www.predig.com</a> for complete details.

## Strain Gauge Input

<b>Inputs</b>	Field selectable: 0-15 mV, 0-30 mV, 0-150 mV, 0-300 mV, $\pm 15$ mV, $\pm 25$ mV, $\pm 150$ mV, $\pm 250$ mV, or Modbus PV (Slave)	
<b>Isolated Sensor Power Supply</b>	Terminals EX+ & EX-: 10 VDC or 5 VDC $\pm 10\%$ , rated @ 25 mA max. Note: Do not use 24 VDC to power strain gauge bridge.	
<b>Accuracy</b>	$\pm 0.03\%$ of calibrated span $\pm 1$ count	
<b>Minimum Load Resistance</b>	14 $\Omega$ @ 5 V 28 $\Omega$ @ 10 V	
<b>Maximum Excitation Current</b>	350 mA @ 5 V or 10 V	
<b>Temperature Drift</b>	0.002% of calibrated span/ $^{\circ}\text{C}$ max from 0 to $65^{\circ}\text{C}$ ambient, 0.005% of calibrated span/ $^{\circ}\text{C}$ max from $-30$ to $0^{\circ}\text{C}$ ambient	
<b>Functions</b>	Linear with multi-point linearization	
<b>Multi-Point Linearization</b>	2 to 32 points for PV or PV1 2 to 8 points for PV2 (Dual-scale feature)	
<b>Low Cutoff</b>	0.1 to 999,999 (0 disables cutoff function). Point below at which display always shows zero.	
<b>Decimal Point</b>	Up to five decimal places or none: d.ddddd, d.dddd, d.ddd, d.dd, d.d, or ddddd	
<b>Calibration Range</b>	Input Range	Minimum Span Input 1 & 2
	15 mV	0.2 mV
	25 mV, 30 mV	0.4 mV
	150 mV	2.0 mV
	250 mV, 300 mV	4.0 mV
	An Error message will appear if the input 1 and input 2 signals are too close together.	
<b>Input Impedance</b>	Strain Gauge Bridge: Greater than 10 M $\Omega$ mV Source: 200 k $\Omega$	

## Relays

<b>Rating</b>	2 or 4 SPDT (Form C) internal and/or 4 SPST (Form A) external; rated 3 A @ 30 VDC and 125/250 VAC resistive load; 1/14 HP ( $\approx 50$ W) @ 125/250 VAC for inductive loads
<b>Noise Suppression</b>	Noise suppression is recommended for each relay contact switching inductive loads.
<b>Deadband</b>	0-100% of span, user programmable
<b>High or Low Alarm</b>	User may program any alarm for high or low trip point. Unused alarm LEDs and relays may be disabled (turn off).
<b>Relay Operation</b>	<ul style="list-style-type: none"> <li>Automatic (non-latching) and/or manual reset</li> <li>Latching (requires manual acknowledge) with or without clear</li> <li>Pump alternation control (2-4 relays)</li> <li>Sampling (based on set point and time)</li> <li>Off (disable unused relays and enable Interlock feature)</li> <li>Manual on/off control mode</li> </ul>
<b>Relay Reset (Acknowledge)</b>	User selectable via front panel button, F4 digital input, external contact closure on digital inputs, or through serial communications
<b>Time Delay</b>	0 to 999.9 seconds, on & off relay time delays. Programmable and independent for each relay
<b>Fail-Safe Operation</b>	Programmable and independent for each relay. Note: Relay coil is energized in non-alarm condition. In case of power failure, relay will go to alarm state.
<b>Auto Initialization</b>	When power is applied to the meter, relays will reflect the state of the input to the meter.
<b>Additional Relays</b>	An external module, model PDA1004, is available to add 4 SPST 3 A relays to the meter.

### Isolated 4-20 mA Sensor Output

<b>Output Source</b>	Process variable (PV), max, min, set points 1-8, Modbus input, or manual control mode		
<b>Scaling Range</b>	1.000 to 23.000 mA for any display range		
<b>Calibration</b>	Factory calibrated: 0.00 to 100.00 = 4-20 mA output		
<b>Analog Out Programming</b>	1.000 mA minimum and 23.000 mA maximum for all parameters: overrange, underrange, max, min, and break		
<b>Accuracy</b>	± 0.1% of span ± 0.004 mA		
<b>Temperature Drift</b>	0.4 µA/°C max from 0 to 65°C ambient, 0.8 µA/°C max from -40 to 0°C ambient Note: Analog output drift is separate from input drift.		
<b>Isolated Sensor Power Supply</b>	Terminals I+ & R: 24 VDC ± 10% isolated from the input at >500 V. May be used to power the 4-20 mA output or other devices (except load cell/strain gauge). All models rated @ 40 mA max.		
<b>External Loop Power Supply</b>	35 VDC maximum		
<b>Output Loop Resistance</b>	<b>Power Supply</b>	<b>Minimum</b>	<b>Maximum</b>
	24 VDC	10 Ω	700 Ω
	35 VDC (external)	100 Ω	1200 Ω
<b>Additional 4-20 mA Outputs</b>	The PD659-1MA-2MA can split the optional 4-20 mA output into two isolated 4-20 mA outputs		
<b>0-10 VDC Output</b>	The PD659-1MA-1V can convert the optional 4-20 mA output to a 0-10 VDC output		

### USB Connection

<b>Function</b>	Programming only
<b>Compatibility</b>	USB 2.0 Standard, Compliant
<b>Connector Type</b>	Micro-B receptacle
<b>Cable</b>	USB A Male to Micro-B Cable
<b>Driver</b>	Microsoft® Windows® 10/11
<b>Power</b>	USB port provides power to the meter. <b>DO NOT</b> apply AC or DC power to the meter while the USB port is in use.

### On-Board Digital Input (F4)

<b>Function</b>	Operate tare function, remote operation of front-panel buttons, acknowledge/reset relays, reset max/min values.
<b>Contacts</b>	3.3 VDC on contact. Connect normally open contacts across F4 to COM
<b>Logic Levels</b>	Logic High: 3 to 5 VDC Logic Low: 0 to 1.25 VDC
<b>Additional I/O</b>	Up to 2 external modules, model PDA1044 with 4 digital inputs and 4 digital outputs each can be added.

### Modbus® RTU Serial Communications

<b>Slave Id</b>	1 – 247 (Meter address)
<b>Baud Rate</b>	300 – 19,200 bps
<b>Transmit Time Delay</b>	Programmable between 0 and 199 ms
<b>Data</b>	8 bit (1 start bit, 1 or 2 stop bits)
<b>Parity</b>	Even, Odd, or None with 1 or 2 stop bits
<b>Byte-To-Byte Timeout</b>	0.01 – 2.54 second
<b>Turn Around Delay</b>	Less than 2 ms (fixed)

Note: Refer to the ProVu Modbus® Register Tables located at [www.predig.com](http://www.predig.com) for details.

### MeterView Pro Software

<b>Availability</b>	Download directly from meter or from <a href="http://www.predig.com/software">www.predig.com/software</a>
<b>System Requirements</b>	Microsoft® Windows® 10/11 USB 2.0 (for programming only)
<b>Communications</b>	USB 2.0 (for programming only) (Standard USB A to Micro USB B) RS-232 adapter, RS-485 adapter and RS-485 to USB converter (programming, monitoring, and data logging)
<b>Configuration</b>	Configure meters one at a time
<b>Power</b>	USB port provides power to the meter. <b>DO NOT</b> apply AC or DC power to the meter while the USB port is in use.



## MOD-LH Light/Horn

<b>Light Colors</b>	MOD-LHRB1: Red MOD-LHGB1: Green MOD-LHYB1: Yellow MOD-LHBB1: Blue MOD-LHWB1: White MOD-LH5CB1: User selectable: red, green, yellow, blue, white MOD-LH3CB1-RYG: 1 layer each of red, yellow, green (consult factory for other colors available)		
<b>Light Action</b>	Can be wired to flash (not available on MOD-LH5CB1) or stay steady on		
<b>Light/Horn &amp; Button Installation</b>	When MOD-LH is ordered with an enclosure, the user performs installation and wiring of Light/Horn and Button in pre-drilled holes.		
<b>Horn</b>	85 dB		
<b>Rating</b>	IP 65		
<b>Light/Horn Independence</b>	Light and horn can be controlled via separate relays		
<b>Power Requirement</b>	No additional power required when wired to a ProVu meter. When mounted remote: 24 VDC		
<b>Sensor Power Supply</b>	The ProVu's internal sensor power supply is capable of supplying 200 mA to power the sensor and other devices such as the Light/Horn. The following table illustrates how much of this power is required to drive various Light/Horns. If more power is needed, then consider the PDA1024-01.		
<i>MOD-LH and MOD-LH5CB1 Models:</i>			
Color	Power Required	Color	Power Required
Red	17 mA	Blue	15 mA
Green	15 mA	White	42 mA
Yellow	23 mA	Horn	20 mA
Example: 17 mA (Red Light) + 20 mA (Horn) = 37 mA total current needed from the 200 mA supply. Available current = 163 mA			
<i>MOD-LH3LCB1-RYG:</i>			
Power Requirement for the horn and each color that is turned on:			
Color	Power Required	Color	Power Required
Red	34 mA	Yellow	33 mA
Green	29 mA	Horn	38 mA
Example: 33 mA (Yellow Light) + 38 mA (Horn) = 71 mA total current needed from the 200 mA supply. Available current = 139 mA			
<b>Reset / Silence Button</b>	NEMA 4X; may be wired to F4 terminal on ProVu. F3 front panel button can also be used to reset relays.		
<b>Button Labels</b>	The Light/Horn accessory comes with 9 pre-printed message labels the user can affix under the red button: RESET, BATCH, ACK, TARE, SILENCE, STOP, START, PAUSE, START/STOP		
<b>Light/Horn Mounting Connection</b>	M22		
<b>Hole Sizes</b>	Light/Horn: 0.875" (22 mm) Button: 0.630" (16 mm)		
<b>Cable Length:</b>	3.28 feet (1 meter)		
<b>Operating Temp. Range</b>	-5 to 40°C (23 to 104°F)		

## Compliance Information

### Safety

<b>UL &amp; C-UL Listed</b>	USA & Canada UL 508 Industrial Control Equipment
<b>UL File Number</b>	E160849
<b>Front Panel</b>	UL Type 4X, NEMA 4X, IP65; panel gasket provided
<b>Low Voltage Directive</b>	EN 61010-1 Safety requirements for measurement, control, and laboratory use

### Electromagnetic Compatibility

<b>Emissions</b>	EN 55022 Class A ITE emissions requirements
Radiated Emissions	Class A
AC Mains Conducted Emissions	Class A
<b>Immunity</b>	EN 61326-1 Measurement, control, and laboratory equipment EN 61000-6-2 EMC heavy industrial generic immunity standard
RFI - Amplitude Modulated	80 - 1000 MHz 10 V/m 80% AM (1 kHz) 1.4 - 2.0 GHz 3 V/m 80% AM (1 kHz) 2.0 - 2.7 GHz 1 V/m 80% AM (1 kHz)
Electrical Fast Transients	±2kV AC mains, ±1kV other
Electrostatic Discharge	±4kV contact, ±8kV air
RFI - Conducted	10V, 0.15-80 MHz, 1kHz 80% AM
AC Surge	±2kV Common, ±1kV Differential
Surge	1KV (CM)
Power-Frequency Magnetic Field	30 A/m 70%V for 0.5 period
Voltage Dips	40%V for 5 & 50 periods 70%V for 25 periods
Voltage Interruptions	<5%V for 250 periods

*Note: Testing was conducted on meters installed through the covers of grounded metal enclosures with cable shields grounded at the point of entry representing installations designed to optimize EMC performance.*

## EU Declaration of Conformity

For shipments to the EU and UK, a Declaration of Conformity was printed and included with the product. For reference, a Declaration of Conformity is also available on our website [www.predig.com/docs](http://www.predig.com/docs).

## ORDERING INFORMATION

ProVu PD6100 • Standard Models		
85-265 VAC Model	12-24 VDC Model	Options Installed
<a href="#">PD6100-6R0</a>	<a href="#">PD6100-7R0</a>	None
<a href="#">PD6100-6R2</a>	<a href="#">PD6100-7R2</a>	2 Relays
<a href="#">PD6100-6R3</a>	<a href="#">PD6100-7R3</a>	4-20 mA Output
<a href="#">PD6100-6R4</a>	<a href="#">PD6100-7R4</a>	4 Relays
<a href="#">PD6100-6R5</a>	<a href="#">PD6100-7R5</a>	2 Relays & 4-20 mA Output
<a href="#">PD6100-6R7</a>	<a href="#">PD6100-7R7</a>	4 Relays & 4-20 mA Output

Note: 24 V sensor power supply standard on all models.

ProVu PD6100 • SunBright Display Models		
85-265 VAC Model	12-24 VDC Model	Options Installed
<a href="#">PD6100-6H0</a>	<a href="#">PD6100-7H0</a>	None
<a href="#">PD6100-6H2</a>	<a href="#">PD6100-7H2</a>	2 Relays
<a href="#">PD6100-6H3</a>	<a href="#">PD6100-7H3</a>	4-20 mA Output
<a href="#">PD6100-6H4</a>	<a href="#">PD6100-7H4</a>	4 Relays
<a href="#">PD6100-6H5</a>	<a href="#">PD6100-7H5</a>	2 Relays & 4-20 mA Output
<a href="#">PD6100-6H7</a>	<a href="#">PD6100-7H7</a>	4 Relays & 4-20 mA Output

Note: 24 V sensor power supply standard on all models.

Accessories	
Model	Description
<a href="#">MOD-LHRB1</a>	Red <sup>(2)</sup> Light/Horn and Button with Holes Drilled for Light/Horn and Button in Enclosure <sup>(1)</sup>
<a href="#">PDA-BUTTON1R</a>	Button
<a href="#">PDA-LHR</a>	Red <sup>(2)</sup> Light/Horn
<a href="#">PDA1002</a>	DIN Rail Mounting Kit for Two Expansion Modules
<a href="#">PDA1004</a>	4-Relay Expansion Module
<a href="#">PDA1011</a>	Dual Analog Output Expansion Module
<a href="#">PDA1024-01</a>	24 VDC Power Supply for DIN Rail
<a href="#">PDA1044</a>	4 Digital Inputs & 4 Digital Outputs Module
<a href="#">PDA1232</a>	RS-232 Serial Adapter
<a href="#">PDA1485</a>	RS-485 Serial Adapter
<a href="#">PDA18DINSH</a>	Stainless Steel Sun Hood
<a href="#">PDA7485-I</a>	RS-232 to RS-422/485 Isolated Converter
<a href="#">PDA8232-N</a>	USB to RS-232 Non-Isolated Converter
<a href="#">PDA8485-I</a>	USB to RS-422/485 Isolated Converter
<a href="#">PDX6901</a>	Suppressor (snubber): 0.01 $\mu$ F/470 $\Omega$ , 250 VAC

- The enclosure comes pre-drilled with holes for Light/Horn and Button to be installed by user. Meter / controller and enclosure are sold separately. The Light/Horn hole is located on the top in the back left corner of the enclosure and the button hole is centered on the front of the enclosure about an inch off the bottom of the door. For mounting in different locations, order items separately and drill holes and mount as desired.
- For other light color options see the MOD-LH Series manual (LIMMODLH).

ProVu Upgrade Cards	
Model	Description
<a href="#">PD1102</a>	2 Relays
<a href="#">PD1103</a>	4-20 mA Output <sup>1</sup>
<a href="#">PD1104</a>	4 Relays
<a href="#">PD1105</a>	2 Relays + 4-20 mA Output <sup>1</sup>
<a href="#">PD1107</a>	4 Relays + 4-20 mA Output <sup>1</sup>

Note: These upgrade cards are intended for customers who already have a meter and want to upgrade its functionality.

1. Output calibration required by user.

PDA2360 Series Control Stations	
Model	Description
<a href="#">PDA2360-E</a>	1 Emergency Stop Button
<a href="#">PDA2361-A</a>	1 Black Ack Button
<a href="#">PDA2361-Q</a>	1 Black Silence Button
<a href="#">PDA2361-T</a>	1 Black Tare Button
<a href="#">PDA2364-MRUE</a>	4 Black Buttons: Menu, Right, Up, Enter

## Your Local Distributor is:

## Disclaimer

The information contained in this document is subject to change without notice. Precision Digital Corporation makes no representations or warranties with respect to the contents hereof, and specifically disclaims any implied warranties of merchantability or fitness for a particular purpose.

©2024 Precision Digital Corporation. All rights reserved.



Cancer and Reproductive Harm - [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)

LDS6100\_G 12/24