



# APCO ASC SINGLE BODY SEWAGE COMBINATION AIR VALVES



Instruction **D12019**  
December 2012

# DeZURIK

## APCO ASC Single Body Sewage Combination Air Valves

---

### Instructions

These instructions provide installation, operation and maintenance information for the APCO ASC-(443, 445, 447, 449 & 456) Single Body Sewage Combination Air Valves. They are for use by personnel who are responsible for installation, operation and maintenance of APCO ASC Single Body Sewage Combination Air Valves.

### Safety Messages

All safety messages in the instructions are flagged with an exclamation symbol and the word Caution, Warning or Danger. These messages indicate procedures that must be followed exactly to avoid equipment damage, personal injury or death. Safety label(s) on the product indicate hazards that can cause equipment damage, personal injury or death.

Safety label(s) on the product indicate hazards that can cause equipment damage, personal injury or death. If a safety label becomes difficult to see or read, or if a label has been removed, please contact DeZURIK for replacement label(s).



#### **WARNING!**

**Personnel involved in the installation or maintenance of valves should be constantly alert to potential emission of pipeline material and take appropriate safety precautions. Always wear suitable protection when dealing with hazardous pipeline materials. Handle valves, which have been removed from service with suitable protection for any potential pipeline material in the valve.**

---

### Inspection

Your APCO ASC Single Body Sewage Combination Air Valve has been packaged to provide protection during shipment; however, it can be damaged in transport. Carefully inspect the unit for damage upon arrival and file a claim with the carrier if damage is apparent.

### Parts

Recommended spare parts are listed on the assembly drawing. These parts should be stocked to minimize downtime. Order parts from your local DeZURIK sales representative, or directly from DeZURIK. When ordering parts please choose from the following:

**If the valve has a DeZURIK APCO nameplate** please include the 7-digit part number and 4-digit revision number (example: 9999999R000) located on the data plate attached to the valve assembly. Also include the part name, the assembly drawing number, the balloon number and the quantity stated on the assembly drawing.

**If there isn't any nameplate visible on the valve**, please include Valve Model number, the part name, and item number from the assembly drawing. You may contact your local DeZURIK APCO Representative to help you identify your valve.

### DeZURIK Service

DeZURIK service personnel are available to maintain and repair all DeZURIK products. DeZURIK also offers customized training programs and consultation services.

For more information, contact your local DeZURIK sales representative or visit our website at [www.dezurik.com](http://www.dezurik.com).

**Table of Contents**

Description - - - - -	4
Handling and Storage - - - - -	4
Installation - - - - -	4
Maintenance/Backflushing - - - - -	4
<i>Backflushing to Force Main</i> - - - - -	5
<i>Backflushing to Atmospheric or Vacuum Tank</i> - - - - -	5
<i>Disassembly Procedure</i> - - - - -	6
<i>Assembly Procedure</i> - - - - -	7
Operation - - - - -	7
Drawings - - - - -	8
Troubleshooting - - - - -	10

# DeZURIK

## APCO ASC Single Body Sewage Combination Air Valves

---

### Description

The APCO ASC Single Body Sewage Combination Air Valves are specially designed for use with sewage and waste media. The float and venting mechanisms in the valve allow air/gas built up in the pipeline to escape while preventing media spillage or spurting.

Combination Air Valves vent large volumes of air when the sewage line is filled and allow air to re-enter when draining to prevent vacuum or column separation from occurring, the valve also vents pockets of air through a smaller orifice.

### Handling and Storage

Lifting the valve improperly may damage it. Do not fasten lifting devices to piping or attached components. Lift the valve with a sling around the flanged end of the body.

If installation will be delayed, place valve indoors in secure, weather tight storage. If temporary outside storage is unavoidable, make sure a vermin proof rain cover (water shedding tarp, etc.) is secured around/over the valve to keep off rain and mud. Skid and set the valve on a flat, solid, and well drained surface for protection from ground moisture, runoff and pooled rain water.

### Installation

- The sewage air valve is fitted with a shut off valve for isolating the valve from the main for inspection and backflushing.
- The sewage air valve and valve vault should have adequate drainage and be sufficiently protected from possible freezing conditions.
- It is recommend the sewage air valve discharge ports be ordered threaded and piped to a drain, particularly when installed within a pumping station, to prevent the danger of flooding due to malfunction or clogging.

### Maintenance/Backflushing

The valve should be backflushed to prevent grease and scum buildup inside the valve which can prevent the valve from operating properly. Valves can be ordered with the optional backflushing attachments.

The valve should be backflushed 6 months after the initial operating date. If the initial backflushing process only takes a few minutes to clean the valve, the next backflushing can be scheduled in 12 months. If the initial backflushing process takes 15 minutes or longer to clean the valve, the next backflushing should be scheduled in 3 months.

**Maintenance/Backflushing** *(Continued)****Backflushing to Force Main***

If a clean water service is available, it must be at least 15 psi higher than the main pressure, to prevent sewage from back flowing into the potable water line. See Figure 2 for part identification.

Valves **(with optional Backflush Attachment)** may be flushed back into the force main by:

1. Leave the Isolation Valve A open.
2. Connect the Backflush Hose C to Valve D.
3. Backflush for 2 – 3 minutes (or as long as it takes to flush out all the sediment).
4. Close Valve D.
5. After backflushing, close Isolation Valve A.
6. Remove Backflush Hose C and vent pressure in the valve thru Valve D.
7. Remove cover bolts (4) and remove the cover (2).
8. Visually inspect the valve interior. If grease deposits interfere with the valve operation, scrap out grease deposits.
9. If the valve was leaking thru the Outlet Port during backflushing, replace the seat (6) and needle (7) before replacing the cover (2).
10. Replace cover (2) and cover bolts (4).  
**Note:** If cover gasket (3) is damaged, replace cover gasket.
11. Slowly open Isolation Valve A to place valve back in service.

***Backflushing to Atmospheric or Vacuum Tank***

If a clean water service is not available, with 15 psi higher than the main pressure, backflush thru Drain Valve B into an atmospheric or vacuum collection tank.

Valves **(with optional Backflush Attachment)** may be flushed back into tank by:

1. Close Isolation Valve A.
2. Connect Drain Valve B to an atmospheric or vacuum collection tank.  
**Note:** If a vacuum collection tank is used, a pipe plug with a ¼" hole in it may be inserted into the outlet port of the Air and Vacuum Valve to limit the amount of air drawn back into the vacuum tank.
3. Open Drain Valve B.
4. Connect the Backflush Hose C to Valve D.
5. Backflush for 2 – 3 minutes (or as long as it takes to flush out all the sediment).
6. Close Valve D.
7. After backflushing, close Isolation Valve A.
8. Remove Backflush Hose C and vent pressure in the valve thru Valve D.
9. Remove cover bolts (4) and remove the cover (2).

# DeZURIK

## APCO ASC Single Body Sewage Combination Air Valves

---

### Maintenance/Backflushing *(Continued)*

10. Visually inspect the valve interior. If grease deposits interfere with the valve operation, scrap out grease deposits.
11. If the valve was leaking thru the Outlet Port during backflushing, replace the seat (6) and needle (7) before replacing the cover (2).
12. Replace cover (2) and cover bolts (4).  
**Note:** If cover gasket (3) is damaged, replace cover gasket.
13. Close Drain Valve B.
14. Slowly open Isolation Valve A to place valve back in service.

### Disassembly Procedure

See Figure 1 for part identification.



#### **WARNING!**

**Servicing the Air Valve while the pipeline is under pressure can cause personal injury or equipment damage. Relieve pipeline pressure or shut off isolation valve before servicing the Air Valve.**

---

1. Relieve pipeline pressure or shut off isolation valve at inlet to Air Valve.



#### **WARNING!**

**Do not completely remove pipe plug or cover screws while the valve is under pressure.**

---

2. Loosen pipe plug to relieve pressure in Air Valve.
3. Remove cover bolts (4) and cover (2) from valve body (1).

**Note:** All internals are attached to the cover.

4. If cover gasket (3) is torn or damaged, clean flange surfaces of cover (2) and body (1).
5. Remove frame screws (16) and remove assembly from cover (2).
6. Inspect large seating surface of plug (42) and seat (6) for nicks, wear or sediment coating from chemicals in the media.
7. Inspect seating surface of needle (7) and orifice seat end of plug (42) for same conditions.
8. Inspect surface conditions between seat (6) and cover (2) for possible rust build-up.
9. Inspect all connections of linkage for excessive wear or damage.
10. Inspect float (14) to insure that it is not damaged or that it does not have liquid in it.
11. Thoroughly clean all parts and body.

**Maintenance** *(Continued)***Assembly Procedure**

See Figure 1 for part identification.

1. Install new needle (7) in float lever (13), if necessary.
2. Install new seat (6), if necessary.
3. Reassemble linkage assembly, replacing pin (10) and retaining rings (11), as necessary.  
**Note:** Only factory approved and/or factory supplied stainless steel parts should be used.
4. Assemble leverage frame (5) assembly to cover (2). Be sure that plug (42) moves freely from its open to closed position and the plug sits square and flat on seat (6). Improper positioning of leverage frame to cover before tightening screws can result in binding of plug.
5. Assemble cover (2) to body (1), installing new gasket (3) if necessary. Tighten cover screws (4) opposite each other in rotation.
6. Tighten pipe plug.
7. Open isolation valve at inlet of Air Valve slowly and observe the closing of plug (42) coming up to and seating seat (6). Except for a very slight spurt of liquid at closing, a positive seal should result.

**Operation**

Combination Sewage Air Valves incorporate a large orifice for pipeline filling and draining (Air/Vacuum function) and a small orifice (Air release function) for releasing gas pockets to increase pipeline efficiency.

# DeZURIK

## APCO ASC Single Body Sewage Combination Air Valves

### Drawings


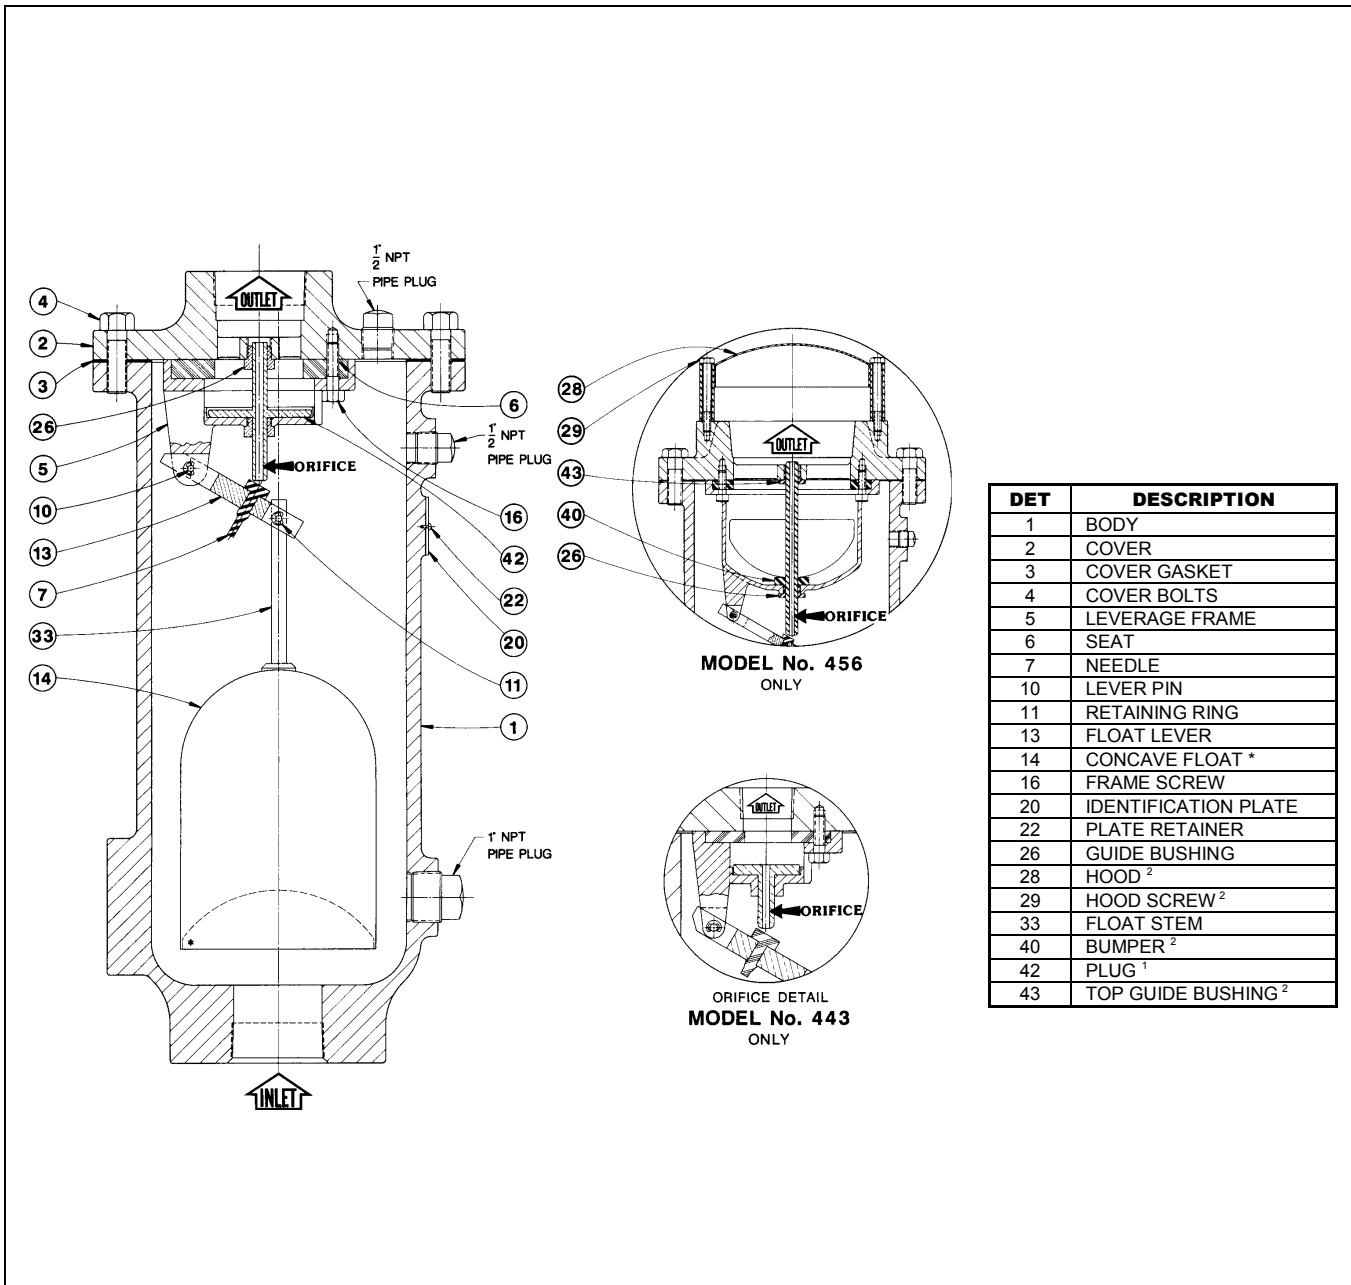


Figure 1: Part Identification



**APCO ASC Single Body Sewage Combination Air Valves**

**Maintenance (Continued)**

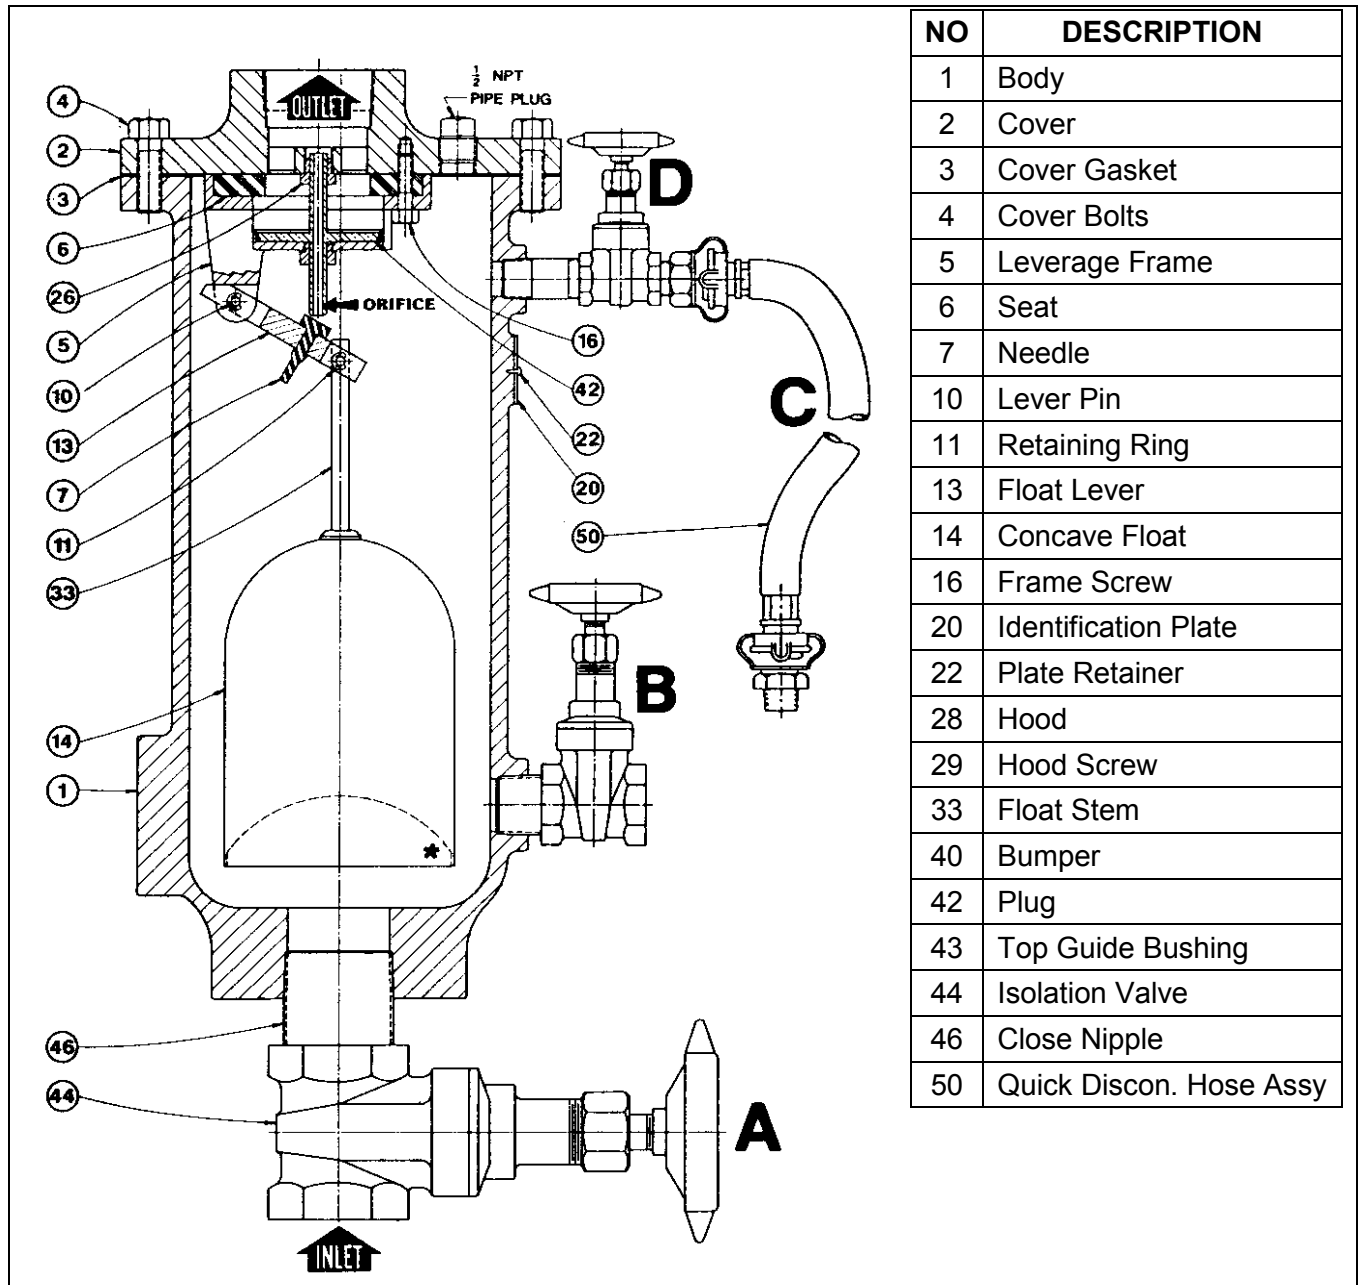

NO	DESCRIPTION
1	Body
2	Cover
3	Cover Gasket
4	Cover Bolts
5	Leverage Frame
6	Seat
7	Needle
10	Lever Pin
11	Retaining Ring
13	Float Lever
14	Concave Float
16	Frame Screw
20	Identification Plate
22	Plate Retainer
28	Hood
29	Hood Screw
33	Float Stem
40	Bumper
42	Plug
43	Top Guide Bushing
44	Isolation Valve
46	Close Nipple
50	Quick Discon. Hose Assy

**Figure 2: ASC With Optional Backflush Attachments**

# DeZURIK

## APCO ASC Single Body Sewage Combination Air Valves

---

### Troubleshooting

Condition	Possible Cause	Corrective Action
Valve leaks out of Outlet port.	Dirty seat and/or plug.	Clean seat and/or plug.
	Dirty needle and/or plug orifice.	Clean needle and/or plug orifice.
	Worn seat and/or needle.	Replace seat and/or needle.
	Float linkage is dirty.	Clean float linkage.

## Guarantee

Products, auxiliaries and parts thereof of DeZURIK, Inc. manufacture are warranted to the original purchaser for a period of twenty-four (24) months from date of shipment from factory, against defective workmanship and material, but only if properly installed, operated and serviced in accordance with DeZURIK, Inc. recommendations. Repair or replacement, at our option, for items of DeZURIK, Inc. manufacture will be made free of charge, (FOB) our facility with removal, transportation and installation at your cost, if proved to be defective within such time, and this is your sole remedy with respect to such products. Equipment or parts manufactured by others but furnished by DeZURIK, Inc. will be repaired or replaced, but only to the extent provided in and honored by the original manufacturers warranty to DeZURIK, Inc., in each case subject to the limitations contained therein. No claim for transportation, labor or special or consequential damages or any other loss, cost or damage shall be allowed. You shall be solely responsible for determining suitability for use and in no event shall DeZURIK, Inc. be liable in this respect. DeZURIK, Inc. does not guarantee resistance to corrosion, erosion, abrasion or other sources of failure, nor does DeZURIK, Inc. guarantee a minimum length of service. Your failure to give written notice to us of any alleged defect under this warranty within twenty (20) days of its discovery, or attempts by someone other than DeZURIK, Inc. or its authorized representatives to remedy the alleged defects therein, or failure to return product or parts for repair or replacement as herein provided, or failure to install and operate said products and parts according to instructions furnished by DeZURIK, Inc., or misuse, modification, abuse or alteration of such product, accident, fire, flood or other Act of God, or failure to pay entire contract price when due shall be a waiver by you of all rights under this warranty.

The foregoing guarantee shall be null and void if, after shipment from our factory, the item is modified in any way or a component of another manufacturer, such as but not limited to, an actuator is attached to the item by anyone other than DeZURIK, Inc. Factory Service personnel. All orders accepted shall be deemed accepted subject to this limited warranty, which shall be exclusive of any other or previous Warranty, and this shall be the only effective guarantee or warranty binding on DeZURIK, Inc., despite anything to the contrary contained in the purchase order or represented by any agent or employee of DeZURIK, Inc., in writing or otherwise, notwithstanding, including but not limited to implied warranties.

Metric fasteners should not be used with ASME Class 150/300 bolt holes and flange bolt patterns. If you use metric fasteners with ASME Class 150/300 bolt holes and flange bolt patterns, it may lead to product failure, injury, and loss of life. DeZURIK Inc. disclaims all liability associated with the use of metric fasteners with ASME Class 150/300 bolt holes and flange patterns, including but not limited to personal injury, loss of life, loss of product, production time, equipment, property damage, lost profits, consequential damages of any kind and environment damage and/or cleanup. Use of metric fasteners with ASME Class 150/300 bolt holes and flange bolt patterns is a misuse that voids all warranties and contractual assurances. If you use metric fasteners with ASME Class 150/300 bolt holes and flange bolt patterns, you do so at your sole risk and any liability associated with such use shall not be the responsibility of DeZURIK, Inc. In addition to the foregoing, DeZURIK's Manufacturer's Conditions apply.

THE FOREGOING REPAIR AND REPLACEMENT OBLIGATIONS ARE IN LIEU OF ALL OTHER WARRANTIES, OBLIGATIONS AND LIABILITIES, INCLUDING ALL WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE OR OF MERCHANTABILITY OR OTHERWISE, EXPRESSED OR IMPLIED IN FACT OR BY LAW, AND STATE DEZURIK, INC.'S ENTIRE AND EXCLUSIVE LIABILITY AND YOUR EXCLUSIVE REMEDY FOR ANY CLAIM IN CONNECTION WITH THE SALE AND FURNISHING OF SERVICES, GOODS OR PARTS, THEIR DESIGN, SUITABILITY FOR USE, INSTALLATION OR OPERATIONS.

## Limitation of liability

LIMITATION OF LIABILITY: IN NO EVENT SHALL DEZURIK, INC. BE LIABLE FOR ANY DIRECT, INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES WHATSOEVER, AND DEZURIK, INC.'S LIABILITY, UNDER NO CIRCUMSTANCES, WILL EXCEED THE CONTRACT PRICE FOR THE GOODS AND/OR SERVICES FOR WHICH LIABILITY IS CLAIMED. ANY ACTION BY YOU FOR BREACH OF CONTRACT MUST BE COMMENCED WITHIN 12 MONTHS AFTER THE DATE OF SALE.

## Sales and Service

For information about our worldwide locations, approvals, certifications and local representative:

Web site: [www.dezurik.com](http://www.dezurik.com) E-Mail: [info@dezurik.com](mailto:info@dezurik.com)



250 Riverside Ave. N., Sartell, MN 56377 • Phone: 320-259-2000 • Fax: 320-259-2227

*DeZURIK, Inc. reserves the right to incorporate our latest design and material changes without notice or obligation. Design features, materials of construction and dimensional data, as described in this manual, are provided for your information only and should not be relied upon unless confirmed in writing by DeZURIK, Inc. Certified drawings are available upon request.*